




SIM800F_Hardware Design_V1.00

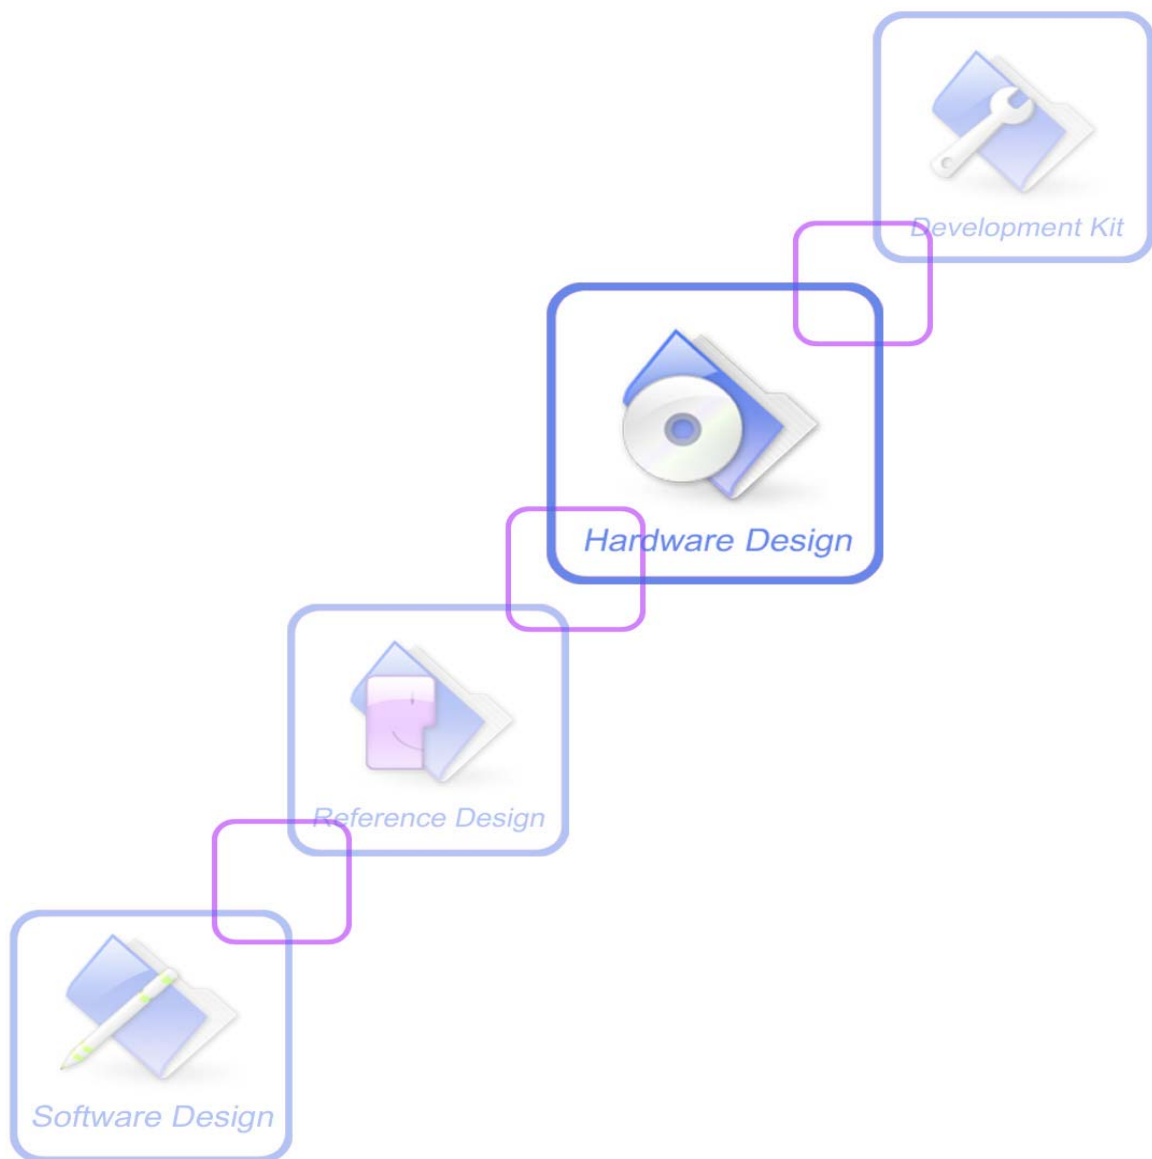

Document Title	SIM800F Hardware Design
Version	1.00
Date	2015-07-31
Status	Release
Document Control ID	SIM800F_Hardware Design_V1.00

General Notes

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of SIMCom Limited, copying of this document and giving it to others and the using or communication of the contents thereof are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2015

Contents

Contents.....	3
Table Index.....	6
Figure Index	8
Version History.....	10
1 Introduction.....	11
2 SIM800F Overview.....	11
2.1 SIM800F Key Features.....	11
2.2 Operating Modes	13
2.3 SIM800F Functional Diagram.....	14
3 Package Information	15
3.1 Pin out Diagram.....	15
3.2 Pin Description	16
3.3 Package Dimensions.....	18
4 Application Interface.....	20
4.1 Power Supply.....	20
4.1.1 Power Supply Pins	22
4.1.2 Monitoring Power Supply	22
4.2 Power on/off.....	22
4.2.1 Power on SIM800F	22
4.2.2 Power off SIM800F.....	23
4.2.3 Restart SIM800F by PWRKEY Pin	25
4.3 Reset Function	25
4.4 Power Saving Mode.....	26
4.4.1 Minimum Functionality Mode	26
4.4.2 Sleep Mode 1 (AT+CSCLK=1)	27
4.4.3 Wake Up SIM800F from Sleep Mode 1 (AT+CSCLK=1)	27
4.4.4 Sleep Mode 2 (AT+CSCLK=2)	27
4.4.5 Wake Up SIM800F from Sleep Mode 2 (AT+CSCLK=2)	27
4.5 RTC Backup	28
4.6 Serial Port and USB Interface	29
4.6.1 Function of Serial Port	29
4.6.2 Serial Port Connection	30
4.6.3 USB Interface.....	32
4.6.4 Software Upgrading and Debugging.....	32
4.7 RI Behaviors.....	33
4.8 Audio Interfaces	34
4.8.1 Speaker Reference Circuit.....	35
4.8.2 Microphone Reference Circuit.....	35
4.8.3 Audio Electronic Characteristics.....	36
4.8.4 TDD	36
4.9 SIM Card Interface	36
4.9.1 SIM Card Application.....	36

4.9.2	SIM Card Circuit Design Guide.....	38
4.9.3	Design Considerations for SIM Card Holder.....	38
4.10	DISP Interface	39
4.11	Keypad Interface	40
4.12	GPIO.....	41
4.12.1	RF_SYNC/JD	42
4.12.2	UART2_RXD/TXD.....	42
4.13	I2C BUS	42
4.14	ADC.....	43
4.15	Network Status Indication	44
4.16	Power On Status Indication	44
4.17	PWM	45
4.18	KPLED	46
4.19	Bluetooth	46
4.20	Antenna Interface	46
4.20.1	GSM Antenna Interface	47
4.20.2	Bluetooth Antenna Interface	48
5	PCB Layout	49
5.1	PIN Assignment.....	49
5.2	Principle of PCB Layout.....	50
5.2.1	Antenna	50
5.2.2	Power Supply	50
5.2.3	SIM Card Interface.....	50
5.2.4	Audio Interface.....	50
5.2.5	Others.....	50
6	Electrical, Reliability and Radio Characteristics.....	51
6.1	Absolute Maximum Ratings	51
6.2	Recommended Operating Conditions.....	51
6.3	Digital Interface Characteristics	51
6.4	SIM Card Interface Characteristics	51
6.5	SIM_VDD Characteristics.....	52
6.6	VDD_EXT Characteristics	52
6.7	VRTC Characteristics	52
6.8	Current Consumption (VBAT = 4V)	53
6.9	Electro-Static Discharge	54
6.10	Radio Characteristics.....	54
6.10.1	Module RF Output Power.....	54
6.10.2	Module RF Receive Sensitivity	56
6.10.3	Module Operating Frequencies.....	56
7	Manufacturing	57
7.1	Top and Bottom View of SIM800F.....	57
7.2	Typical Solder Reflow Profile.....	57
7.1.	The Moisture Sensitivity Level	58
7.2.	Baking Requirements	58
8.	Appendix	59
I.	Related Documents.....	59
II.	Multiplex Function	60

III.	Terms and Abbreviations	61
IV.	Safety Caution	63

Table Index

TABLE 1: SIM800F KEY FEATURES.....	11
TABLE 2: CODING SCHEMES AND MAXIMUM NET DATA RATES OVER AIR INTERFACE	13
TABLE 3: OVERVIEW OF OPERATING MODES.....	13
TABLE 4: PIN DESCRIPTION	16
TABLE 5: RECOMMENDED ZENER DIODE	21
TABLE 6: ELECTRONIC CHARACTERISTIC OF THE RESET PIN.....	26
TABLE 7: CURRENT CONSUMPTION OF MINIMUM FUNCTIONALITY MODE.....	27
TABLE 8: SERIAL PORT AND USB PIN DEFINITION	29
TABLE 9: SERIAL PORT CHARACTERISTICS.....	29
TABLE 10: VBUS CHARACTERISTICS.....	32
TABLE 11: RI BEHAVIORS	33
TABLE 12: AUDIO INTERFACE DEFINITION.....	34
TABLE 13: MICROPHONE INPUT CHARACTERISTICS.....	36
TABLE 14: AUDIO OUTPUT CHARACTERISTICS	36
TABLE 15: SIM PIN DEFINITION.....	37
TABLE 16: PIN DESCRIPTION (MOLEX SIM CARD HOLDER)	38
TABLE 17: PIN DESCRIPTION (AMPHENOL SIM CARD HOLDER).....	39
TABLE 18: PIN DEFINITION OF DISP INTERFACE.....	40
TABLE 19: DISP MULTIPLEXING FUNCTION.....	40
TABLE 20: PIN DEFINITION OF THE KEYPAD INTERFACE.....	40
TABLE 21: PIN DEFINITION OF THE GPIO.....	41
TABLE 22: GPIO11 MULTIPLEXING FUNCTION	42
TABLE 23: PIN DEFINITION OF UART2_RXD/TXD	42
TABLE 24: PIN DEFINITION OF THE I2C	43
TABLE 25: I2C MULTIPLEX FUNCTION	43
TABLE 26: PIN DEFINITION OF ADC	43
TABLE 27: ADC SPECIFICATION	43
TABLE 28: PIN DEFINITION OF THE STATUS.....	44
TABLE 29: STATUS OF THE NETLIGHT PIN.....	44
TABLE 30: NETLIGHT MULTIPLEX FUNCTION.....	44
TABLE 31: PIN DEFINITION OF THE STATUS.....	44
TABLE 32: STATUS MULTIPLEX FUNCTION	45
TABLE 33: PIN DEFINITION OF THE PWM	45
TABLE 34: PWM OUTPUT CHARACTERISTICS	45
TABLE 35: PWM MULTIPLEX FUNCTION.....	45
TABLE 36: PIN DEFINITION OF THE KPLED	46
TABLE 37: KPLED SPECIFICATION.....	46
TABLE 38: ABSOLUTE MAXIMUM RATINGS.....	51
TABLE 39: RECOMMENDED OPERATING CONDITIONS.....	51
TABLE 40: DIGITAL INTERFACE CHARACTERISTICS	51
TABLE 41: SIM CARD INTERFACE CHARACTERISTICS.....	51
TABLE 42: SIM_VDD CHARACTERISTICS.....	52
TABLE 43: VDD_EXT CHARACTERISTICS	52
TABLE 44: VRTC CHARACTERISTICS	52
TABLE 45: CURRENT CONSUMPTION	53

TABLE 46: THE ESD CHARACTERISTICS (TEMPERATURE: 25°C, HUMIDITY: 45 %)	54
TABLE 47: SIM800F GSM 850 AND EGSM 900 CONDUCTED RF OUTPUT POWER	54
TABLE 48: SIM800F DCS 1800 AND PCS 1900 CONDUCTED RF OUTPUT POWER	55
TABLE 49: SIM800F CONDUCTED RF RECEIVE SENSITIVITY	56
TABLE 50: SIM800F OPERATING FREQUENCIES	56
TABLE 51: MOISTURE CLASSIFICATION LEVEL AND FLOOR LIFE	58
TABLE 52: BAKING REQUIREMENTS	58
TABLE 53: RELATED DOCUMENTS	59
TABLE 54: MULTIPLEX FUNCTION	60
TABLE 55: TERMS AND ABBREVIATIONS	61
TABLE 56: SAFETY CAUTION	63

Figure Index

FIGURE 1: SIM800F FUNCTIONAL DIAGRAM	14
FIGURE 2: SIM800F PIN OUT DIAGRAM (TOP VIEW).....	15
FIGURE 3: DIMENSIONS OF SIM800F (UNIT: MM)	18
FIGURE 4: RECOMMENDED PCB FOOTPRINT OUTLINE (UNIT: MM)	19
FIGURE 5: REFERENCE CIRCUIT OF THE LDO POWER SUPPLY	20
FIGURE 6: REFERENCE CIRCUIT OF THE DC-DC POWER SUPPLY	20
FIGURE 7: REFERENCE CIRCUIT OF THE VBAT INPUT.....	21
FIGURE 8: VBAT VOLTAGE DROP DURING MAX POWER TRANSMITTING.....	21
FIGURE 9: THE LOW LIMIT OF VBAT VOLTAGE DROP DURING TRANSMITTING	22
FIGURE 10: POWERED ON/DOWN MODULE USING TRANSISTOR.....	22
FIGURE 11: POWERED ON/DOWN MODULE USING BUTTON	22
FIGURE 12: TIMING OF POWER ON MODULE.....	23
FIGURE 13: TIMING OF POWER OFF SIM800F BY PWRKEY	23
FIGURE 14: TIMING OF RESTART SIM800F	25
FIGURE 15: RESET CIRCUIT	25
FIGURE 16: RESET TIMING	26
FIGURE 17: RTC SUPPLY FROM CAPACITOR.....	28
FIGURE 18: RTC SUPPLY FROM NON-CHARGEABLE BATTERY	28
FIGURE 19: RTC SUPPLY FROM RECHARGEABLE BATTERY	28
FIGURE 20: CONNECTION OF THE SERIAL INTERFACES.....	30
FIGURE 21: LEVEL CONVERTING BY RESISTOR.....	31
FIGURE 22: LEVEL CONVERTING BY DIODES.....	31
FIGURE 23: TX LEVEL CONVERTING BY TRANSISTOR.....	31
FIGURE 24: RX LEVEL CONVERTING BY TRANSISTOR	32
FIGURE 25: USB REFERENCE CIRCUIT	32
FIGURE 26: CONNECTION FOR SOFTWARE UPGRADING AND DEBUGGING THROUGH UART	33
FIGURE 27: RI BEHAVIOUR OF VOICE CALLING AS A RECEIVER.....	34
FIGURE 28: RI BEHAVIOUR OF URC OR RECEIVE SMS	34
FIGURE 29: RI BEHAVIOUR AS A CALLER	34
FIGURE 30: SPEAKER REFERENCE CIRCUIT	35
FIGURE 31 : MICROPHONE REFERENCE CIRCUIT.....	35
FIGURE 32: REFERENCE CIRCUIT OF THE 8-PIN SIM CARD HOLDER.....	37
FIGURE 33: REFERENCE CIRCUIT OF THE 6-PIN SIM CARD HOLDER.....	37
FIGURE 34: MOLEX 91228 SIM CARD HOLDER	38
FIGURE 35: AMPHENOL C707 10M006 5122 SIM CARD HOLDER.....	39
FIGURE 36: CONNECTION OF DISP INTERFACE.....	40
FIGURE 37: REFERENCE CIRCUIT OF THE KEYPAD INTERFACE	41
FIGURE 38: RF_SYNC SIGNAL DURING TRANSMIT BURST	42
FIGURE 39: REFERENCE CIRCUIT OF NETLIGHT	44
FIGURE 40: REFERENCE CIRCUIT OF PWM DRIVE BUZZER.....	45
FIGURE 41: KPLED DRIVER REFERENCE CIRCUIT.....	46
FIGURE 42: GSM ANTENNA MATCHING CIRCUIT	47
FIGURE 43: GSM ANTENNA MATCHING CIRCUIT WITHOUT RF CONNECTOR	47
FIGURE 44: BLUETOOTH ANTENNA MATCHING CIRCUIT	48
FIGURE 45: PIN ASSIGNMENT	49

FIGURE 46: TOP AND BOTTOM VIEW OF SIM800F	57
FIGURE 47: TYPICAL SOLDER REFLOW PROFILE	57

Version History

Date	Version	Description of change	Author
2015-07-31	1.00	Initial release	Yan Zhang Hailin Yang

1 Introduction

This document describes SIM800F hardware interface in great detail.

This document can help users understand both the interface specifications and the electrical and mechanical details of SIM800F quickly. With the help of this document and other SIM800F application notes or user guide, users can use SIM800F to design various applications quickly.

2 SIM800F Overview

Designed for global market, SIM800F is a quad-band GSM/GPRS module that works on frequencies GSM 850MHz, EGSM 900MHz, DCS 1800MHz and PCS 1900MHz. SIM800F features GPRS multi-slot class 10/class 8 (optional) and supports the GPRS coding schemes CS-1, CS-2, CS-3 and CS-4.

With a tiny configuration of 24*24*3mm, SIM800F can meet almost all the space requirements in users' applications, such as smart phone, PDA and other mobile devices.

SIM800F is a SMT package with 68 pads, and provides hardware interfaces as below:

- One full function UART port
- One USB port for debugging and firmware upgrading
- Audio channel which includes a microphone input and a receiver output
- One SIM card interface
- Support up to 4*5 Keypads
- One display interface
- One I2C master interface for peripheral management
- Programmable general purpose input and output
- Two PWM output
- One ADC input
- Bluetooth antenna interface
- GSM antenna interface

SIM800F is designed with power saving technique so that the current consumption is as low as 0.55mA in sleep mode.

SIM800F integrates TCP/IP protocol and extended TCP/IP AT commands which are very useful for data transfer applications. For details about TCP/IP applications, please refer to *document* ^[2].

2.1 SIM800F Key Features

Table 1: SIM800F key features

Feature	Implementation
Power supply	3.4V ~ 4.4V

Power saving	Typical power consumption in sleep mode is 0.55mA (AT+CFUN=0)
Frequency bands	● SIM800F Quad-band: GSM 850, EGSM 900, DCS 1800, PCS 1900 ● SIM800F can search the 4 frequency bands automatically. The frequency bands also can be set by AT command “AT+CBAND”. For details, please refer to <i>document</i> ^[1] ● Compliant to GSM Phase 2/2+
Transmitting power	● Class 4 (2W) at GSM 850 and EGSM 900 ● Class 1 (1W) at DCS 1800 and PCS 1900
GPRS connectivity	● GPRS multi-slot class 10 (default) ● GPRS multi-slot class 8 (option)
Temperature range	● Operation temperature: -40°C ~ +85°C ● Storage temperature -45°C ~ +90°C
Data GPRS	● GPRS data downlink transfer: max. 85.6 kbps ● GPRS data uplink transfer: max. 42.8 kbps ● Coding scheme: CS-1, CS-2, CS-3 and CS-4 ● Integrate the TCP/IP protocol. ● Support Packet Broadcast Control Channel (PBCCH)
USSD	● Unstructured Supplementary Services Data (USSD) support
SMS	● MT, MO, CB, Text and PDU mode ● SMS storage: SIM card
FAX	Group 3 Class 1
SIM interface	Support SIM card: 1.8V, 3V
External antenna	Antenna pad
Audio features	Speech codec modes: ● Half Rate (ETS 06.20) ● Full Rate (ETS 06.10) ● Enhanced Full Rate (ETS 06.50 / 06.60 / 06.80) ● Adaptive multi rate (AMR) ● Echo Cancellation ● Noise Suppression
Serial port and USB	Serial port: ● Full modem serial port ● Can be used for AT commands or data stream ● Support RTS/CTS hardware handshake ● Comply with GSM 07.10 Multiplexer Protocol ● Support auto baud detect from 1200 bps to 115200bps USB: ● For debugging and upgrading firmware
Phonebook management	Support phonebook types: SM, FD, LD, RC, ON, MC.
SIM application toolkit	GSM 11.14 Release 99
Real time clock	Support RTC
Physical characteristics	Size: 24*24*3mm Weight: 3.1g
Firmware upgrading	Upgrade firmware via USB port

Table 2: Coding schemes and maximum net data rates over air interface

Coding scheme	1 timeslot	2 timeslot	4 timeslot
CS-1	9.05kbps	18.1kbps	36.2kbps
CS-2	13.4kbps	26.8kbps	53.6kbps
CS-3	15.6kbps	31.2kbps	62.4kbps
CS-4	21.4kbps	42.8kbps	85.6kbps

2.2 Operating Modes

The table below summarizes the various operating modes of SIM800F.

Table 3: Overview of operating modes

Mode	Function	
Normal operation	GSM/GPRS SLEEP	Module will automatically go into sleep mode when the sleep mode is enabled and there is no on air or hardware interrupt (such as GPIO interrupt or data on serial port). In this case, the current consumption of module will reduce to the minimal level, and the module can still receive paging message and SMS.
	GSM IDLE	Software is active. Module has been registered to the GSM network and is ready to communicate.
	GSM TALK	Connection between two subscribers is in progress. In this case, the power consumption depends on network settings such as DTX off/on, FR/EFR/HR, hopping sequences, antenna.
	GPRS STANDBY	Module is ready for GPRS data transfer, but no data is currently sent or received. In this case, power consumption depends on network settings and GPRS configuration.
	GPRS DATA	There is GPRS data transfer (PPP or TCP or UDP) in progress. In this case, power consumption is related with network settings (e.g. power control level), uplink/downlink data rates and GPRS configuration (e.g. used multi-slot settings).
Power off	Normal power off by sending the AT command “AT+CPOWD=1” or using the PWRKEY. The power management unit shuts down the power supply for the baseband part of the module, and only the power supply for the RTC is remained. Software is not active. The serial port is not accessible. Power supply (connected to VBAT) remains applied.	
Minimum functionality mode	AT command “AT+CFUN” can be used to set the module to a minimum functionality mode. In this mode, the RF function and SIM card function can be disabled, but the serial port is still accessible. The power consumption in this mode is lower than normal mode.	

2.3 SIM800F Functional Diagram

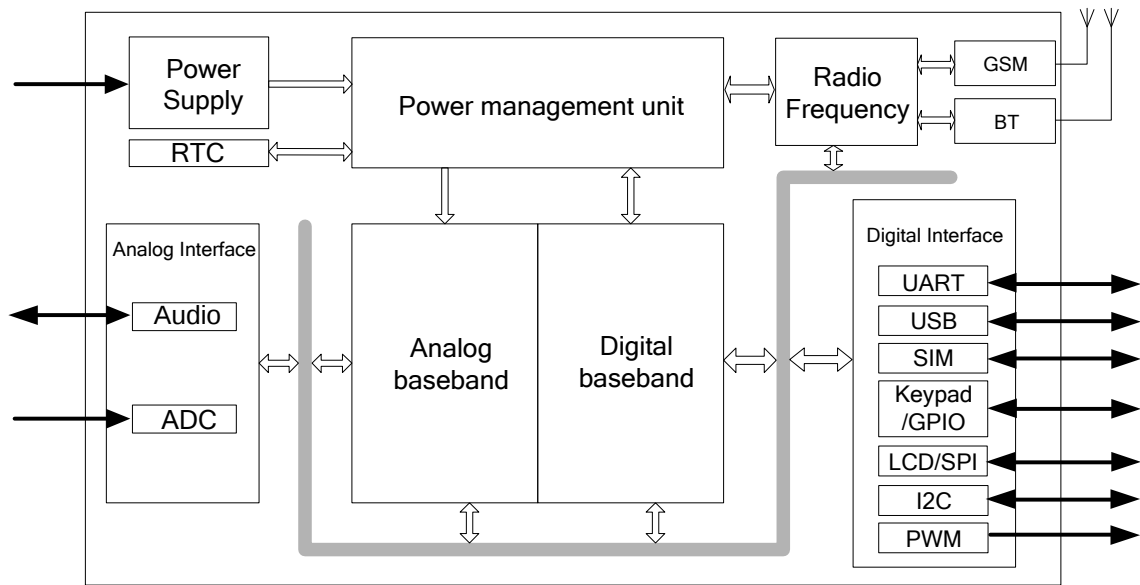


Figure 1: SIM800F functional diagram

3.2 Pin Description

Table 4: Pin description

Pin name	Pin number	I/O	Description	Comment
Power supply				
VBAT	55,56,57	I	Power supply	
VRTC	26	I/O	Power supply for RTC	It is recommended to connect with a battery or a capacitor (e.g. 4.7uF)
VDD_EXT	15	O	2.8V output power supply	Left floating if unused
GND	2,17,18,29,39,45,46,54,58,59,61,62,63,64,65		Ground	
Power on/off				
PWRKEY	1	I	PWRKEY should be pulled low more than 1 second then released to power on/off the module.	Pulled up internally already
Audio interfaces				
MICP	19	I	Differential audio input	Left floating if unused
MICN	20			
SPKP	21	O	Differential audio output	
SPKN	22			
Status				
STATUS	66	O	Power on status indication	Left floating if unused
NETLIGHT	52	O	Network status indication	
LCD interface				
DISP_CLK	11	O	Display interface	Left floating if unused
DISP_DATA	12	I/O		
DISP_D/C	13	O		
DISP_CS	14	O		
I2C interface				
SDA	37	O	I2C bus data	Left floating if unused
SCL	38	I/O	I2C bus clock	
Keypad interface / GPIO				
KBR0	44	I/O	keypad row 0	Left floating if unused; KBC1 can not be pulled down during power on procedure
KBR1	43		keypad row 1	
KBR2	42		keypad row 2	
KBR3	41		keypad row 3	
KBR4	40		keypad row 4	
KBC1	50		keypad column 1	

KBC2	49		keypad column 2	
KBC3	48		keypad column 3	
KBC4	47		keypad column 4	
GPIO10	51		GPIO10	Left floating if unused
GPIO11	67		GPIO11	Do not pull up externally; Left floating if unused
GPIO12	68		GPIO12	Left floating if unused
Serial port				
UART1_RXD	10	I	Receive data	
UART1_TXD	9	O	Transmit data	
UART1_RTS	8	I	Request to send	
UART1_CTS	7	O	Clear to send	Left floating if unused
UART1_DCD	5	O	Data carrier detect	
UART1_RI	4	O	Ring indicator	
UART1_DTR	3	I	Data terminal ready	
USB interface				
USB_VBUS	24	I		
USB_DP	27	I/O	For debugging & upgrading firmware	Left floating if unused
USB_DN	28	I/O		
SIM interface				
SIM_VDD	30	O	Voltage supply for SIM card. Support 1.8V or 3V SIM card	
SIM_DATA	31	I/O	SIM data input/output	Should be protected against ESD with TVS diode
SIM_CLK	32	O	SIM card clock	
SIM_RST	33	O	SIM card reset	
SIM_DET	34	I	SIM card detection	Left floating if unused
ADC				
ADC	25	I	Input voltage range: 0V ~ 2.8V	Left floating if unused
External reset				
NRESET	16	I	Reset input(active low)	Recommend connecting a 100nF capacitor
Pulse width modulation(PWM)				
PWM1	35	O	Pulse-Width Modulation	Left floating if unused
PWM2	36	O	Pulse-Width Modulation	
RF interface				
GSM_ANT	60	I/O	GSM antenna	Impendence must be controlled to 50Ω
BT_ANT	53	I/O	Bluetooth antenna	Impendence must be controlled to 50Ω
Not connect				
NC	6	-	No connection	Do not connect

3.3 Package Dimensions

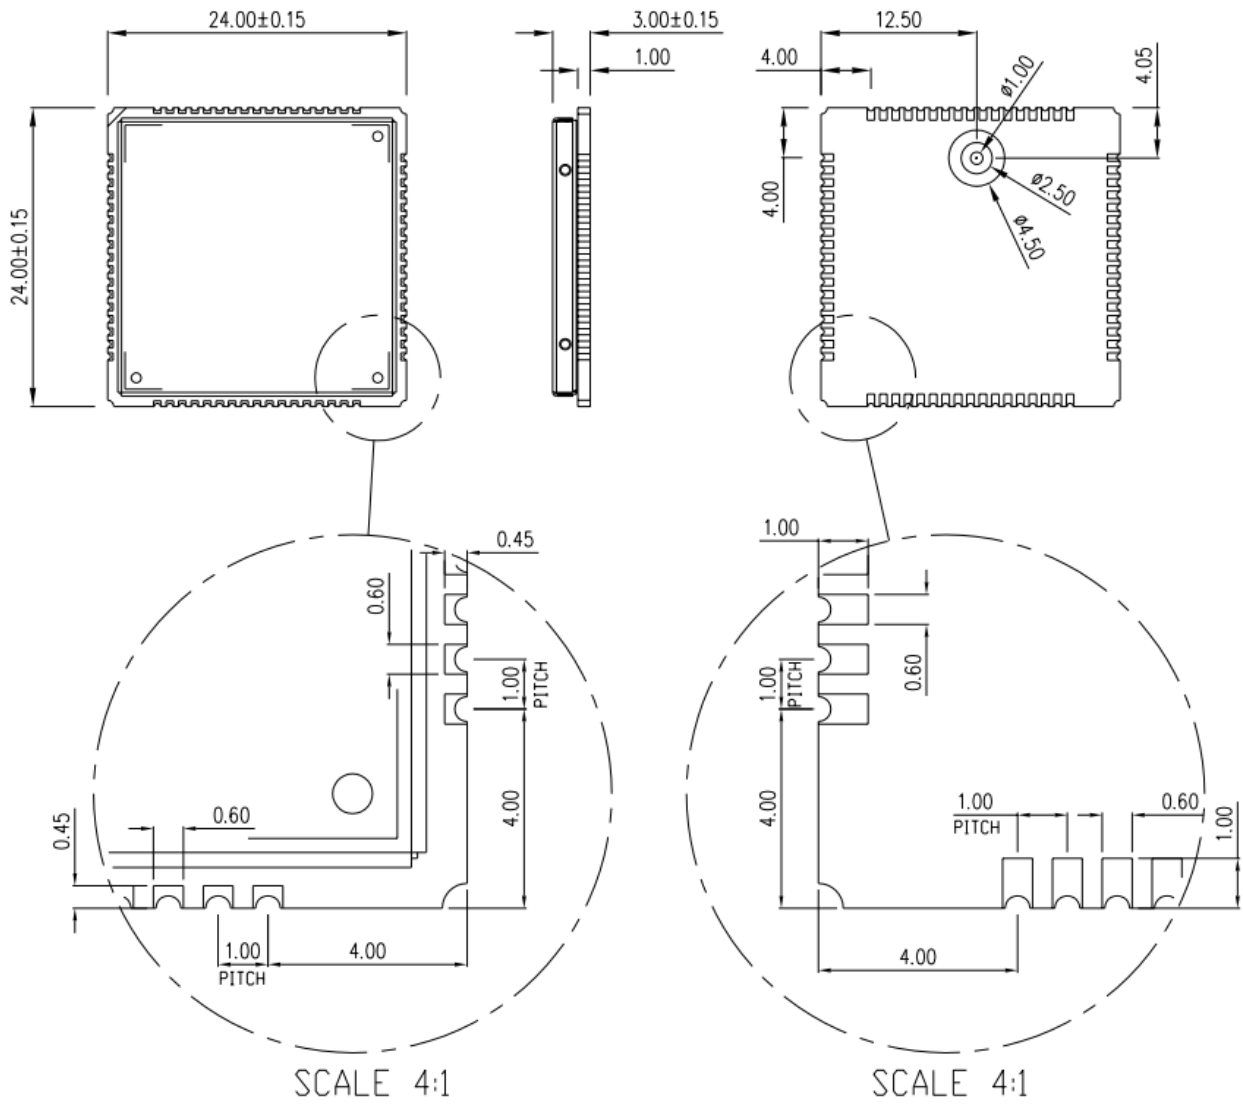


Figure 3: Dimensions of SIM800F (Unit: mm)

Note: Keep copper out of area A. Do not place via in area B to avoid short circuit between the vias on customer board and the test points on the bottom side of the module.

4 Application Interface

4.1 Power Supply

The power supply of SIM800F ranges from 3.4V to 4.4V, and 4.0V is recommended. It must be able to provide sufficient current up to 2A for the high-power transmitting.

If the DC input voltage is +5V and customers do not care about the power efficiency, a high-current low-dropout regulator is recommended. The following figure is the reference design.

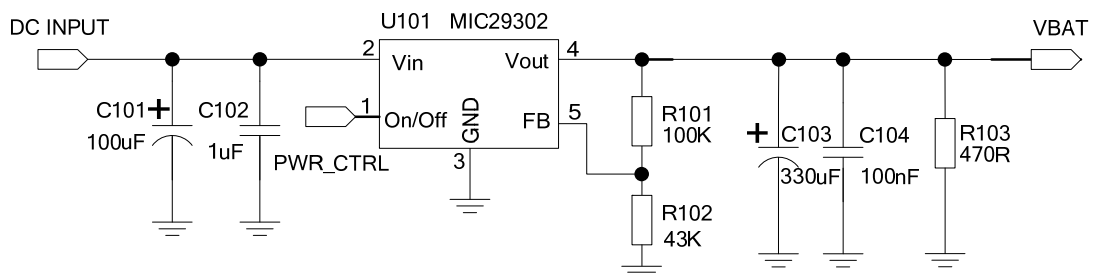


Figure 5: Reference circuit of the LDO power supply

Note: To ensure a proper behavior of the regulator under light load, an extra minimum load (R103 in Figure 5) is required, because the current SIM800F consumed is very small in sleep mode and power off mode. For more details about minimum load, please refer to specification of MIC29302.

To increase power efficiency, the switching mode DC-DC converter is preferable, especially when DC input voltage is quite high. The following figure is the reference design, and it is recommended to reserve a proper ferrite bead (FB101 in Figure 6) in series for EMI suppression.

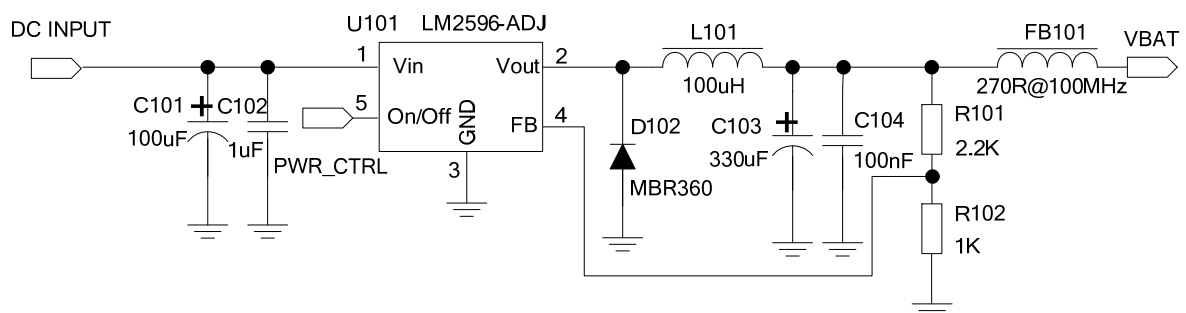


Figure 6: Reference circuit of the DC-DC power supply

For battery-powered application, the 3.7V lithium battery can be connected to SIM800F VBAT pins directly, but other types of battery must be used carefully, since their maximum voltage may rise over the absolute maximum voltage of the module. When battery is used, the total impedance between battery and VBAT pins should be less than 150mΩ.

In any case mentioned above, at the VBAT input pin side, please take below circuit as a reference:

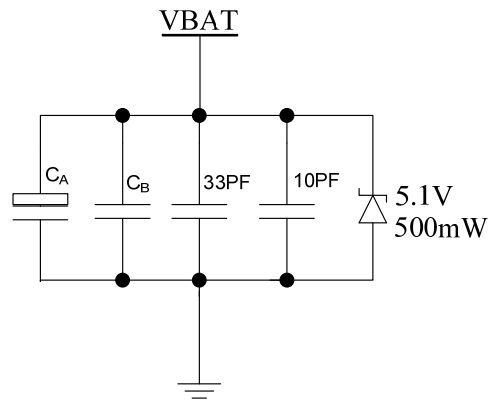


Figure 7: Reference circuit of the VBAT input

Where C_A is a 100 μ F tantalum capacitor with low ESR; C_B could be a 1~10 μ F ceramic capacitor; 33PF and 10PF capacitors are used for eliminating the high frequency interference; 5.1V/500mW zener diode can protect the module against voltage surge.

All of these components should be placed as close to VBAT pins as possible.

Table 5: Recommended zener diode

	Vendor	Part number	Power(watts)	Packages
1	On semi	MMSZ5231BT1G	500mW	SOD123
2	Prisemi	PZ3D4V2H	500mW	SOD323
3	Vishay	MMSZ4689-V	500mW	SOD123
4	Crownpo	CDZ55C5V1SM	500mW	0805

In addition, VBAT voltage will drop during the transmitting. The following figure shows the VBAT voltage drop during maximum power transmitting under the condition:

VBAT=4.0V

C_A =100 μ F tantalum capacitor (ESR=0.7 Ω)

C_B =1 μ F ceramic capacitor

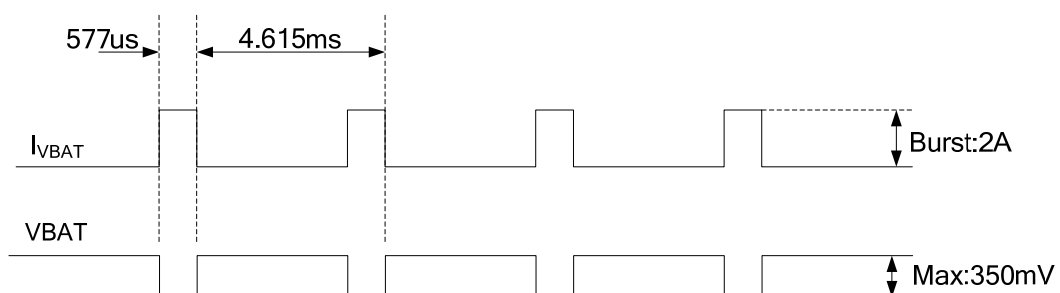


Figure 8: VBAT voltage drop during max power transmitting

However, hardware may shutdown once the voltage drops below 3.0V, which must be avoid.




Figure 9: The low limit of VBAT voltage drop during transmitting

To decrease voltage drop, the PCB traces from power supply to VBAT pins must be wide and short enough. The power IC and the bypass capacitor should be placed as close to the module as possible.

4.1.1 Power Supply Pins

Pin 55, 56, 57 are VBAT input pins, and pin 62, 63, 64, 65 are the main GND for VBAT. The other GND pins should be connected as well.

4.1.2 Monitoring Power Supply

The AT command “AT+CBC” can be used to monitor the VBAT voltage. For detail, please refer to *document* ^[1].

4.2 Power on/off

4.2.1 Power on SIM800F

Users can power on SIM800F by pulling down the PWRKEY pin for more than 1 second then release. This pin is already pulled up to 3V internally, so external pull up is not necessary. Reference circuit is shown as below:

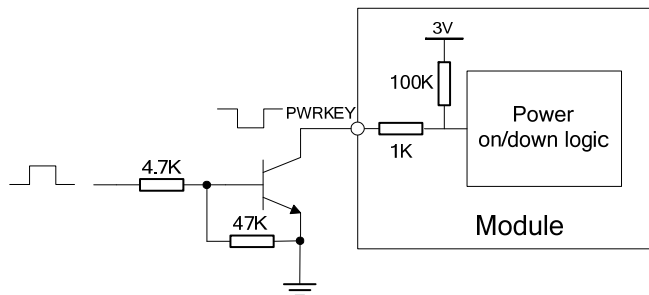


Figure 10: Powered on/down module using transistor

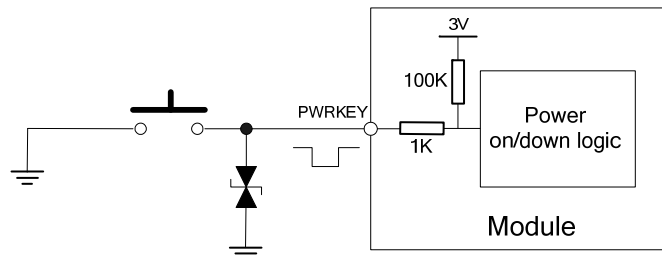


Figure 11: Powered on/down module using button

The power on sequence is illustrated as following figure:

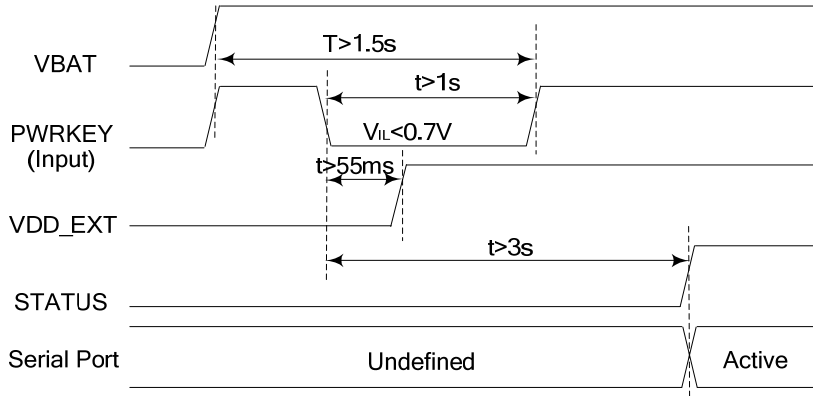


Figure 12: Timing of power on module

If a fixed baud rate was set, when power on procedure is completed, SIM800F will send following URC to indicate that the module is ready to operate:

RDY

This URC does not appear when auto baud detect function is active.

Note: Users can use AT command “AT+IPR=x” to set a fixed baud rate and save the configuration to non-volatile flash memory. After the configuration is saved as fixed baud rate, the Code “RDY” could be received from the serial port every time when SIM800F is powered on. For details, please refer to the chapter “AT+IPR” in document ^[1].

4.2.2 Power off SIM800F

SIM800F will be powered off in the following situations:

- Normal power off procedure: power off SIM800F by the PWRKEY pin
- Normal power off procedure: power off SIM800F by AT command “AT+CPOWD=1”
- Abnormal power off: over-voltage or under-voltage automatic power off
- Abnormal power off: over-temperature or under-temperature automatic power off

4.2.2.1 Power off SIM800F by the PWRKEY Pin

Users can power off SIM800F by pulling down the PWRKEY pin for more than 1 second then release.

The power off sequence is illustrated as below:

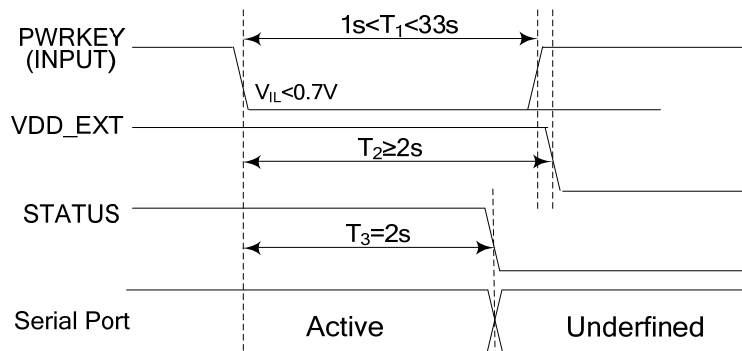


Figure 13: Timing of power off SIM800F by PWRKEY

Note:

1. If the PWRKEY pull down time exceeds 33s, SIM800F module will power up again.
2. VDD_EXT will be turned off after PWRKEY was released for at least 55ms and STATUS was changed to low.
If $1s < T1 < 2s$, then $T2 \geq 2s$
If $2s \leq T1 < 33s$, then $T2 > T1 + 55ms$

This procedure makes the module log off from the network and allows the software to enter into a secure state to save data before completely shut down.

Before the completion of the power off procedure, the module will send URC:

NORMAL POWER OFF

At this moment, AT commands can not be executed any more, and only the RTC is still active. Power off mode can also be indicated by STATUS pin, which is at low level at this time.

4.2.2.2 Power off SIM800F by AT Command

SIM800F can be powered down by AT command “AT+CPOWD=1”. This procedure makes the module log off from the network and allows the software to enter into a secure state to save data before completely shut down.

Before completing the power off procedure, the module will send URC:

NORMAL POWER OFF

At this moment, AT commands can not be executed any more, and only the RTC is still active. Power off mode can also be indicated by STATUS pin, which is at low level at this time.

For details about the AT command “AT+CPOWD”, please refer to document ^[1].

4.2.2.3 Over-voltage or Under-voltage Power off

The module software monitors the VBAT voltage constantly.

If the voltage $\leq 3.5V$, the following URC will be reported:

UNDER-VOLTAGE WARNING

If the voltage $\geq 4.3V$, the following URC will be reported:

OVER-VOLTAGE WARNING

If the voltage $< 3.4V$, the following URC will be reported, and the module will be automatically powered off.

UNDER-VOLTAGE POWER OFF

If the voltage $> 4.4V$, the following URC will be reported, and the module will be automatically powered off.

OVER-VOLTAGE POWER OFF

At this moment, AT commands can not be executed any more, and only the RTC is still active. Power off mode can also be indicated by STATUS pin, which is at low level at this time.

4.2.2.4 Over-temperature or Under-temperature Power off

The module will constantly monitor the temperature of the module,

If the temperature $> +80^{\circ}C$, the following URC will be reported:

+CMTE: 1

If the temperature $< -30^{\circ}C$, the following URC will be reported:

+CMTE:-1

If the temperature $> +85^{\circ}\text{C}$, the following URC will be reported, and the module will be automatically powered down:

+CMTE: 2

If the temperature $< -40^{\circ}\text{C}$, the following URC will be reported, and the module will be automatically powered down:

+CMTE:-2

At this moment, AT commands can not be executed any more, and only the RTC is still active. Power off mode can also be indicated by STATUS pin, which is at low level at this time.

The AT command “AT+CMTE” could be used to read the temperature when the module is running.

For details please refer to document ^[1].

4.2.3 Restart SIM800F by PWRKEY Pin

When users need to power off the module then restart it, please follow the procedure below:

- 1) Power off the module
- 2) Wait for at least 800ms after STATUS pin changed to low level
- 3) Power on the module

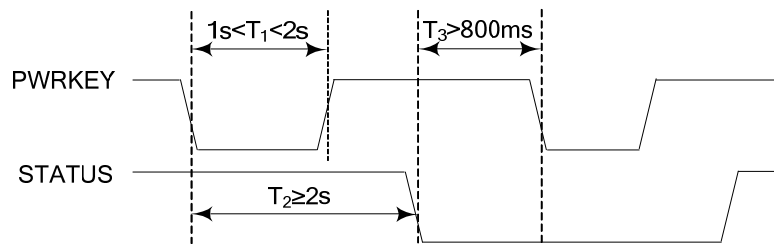


Figure 14: Timing of restart SIM800F

4.3 Reset Function

SIM800F provides a reset pin (pin 16) to reset the module. This function is used as an emergency reset only when AT command “AT+CPOWD=1” and the PWRKEY pin do not work. Pull the RESET pin to ground, then the module will reset.

This pin is already isolated from the chipset inside the module, so the external isolation is not necessary.

Following figure shows the internal circuit:

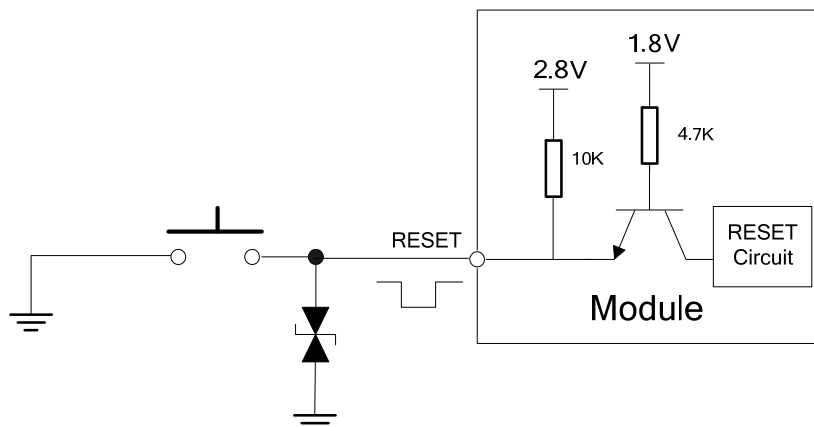


Figure 15: Reset Circuit

RESET pin is pulled up to 2.8V internally, so the users could set the GPIO as an open-drain output pin when use MCU's GPIO to control it.

Table 6: Electronic characteristic of the RESET Pin

Pin name	Symbol	Min	Typ	Max	Unit
RESET	V_{IH}	2.7	-	2.9	V
	V_{IL}	-	-	0.6	V
	$T_{pull\ down}$	105		-	mS

The reset sequence is illustrated as below:

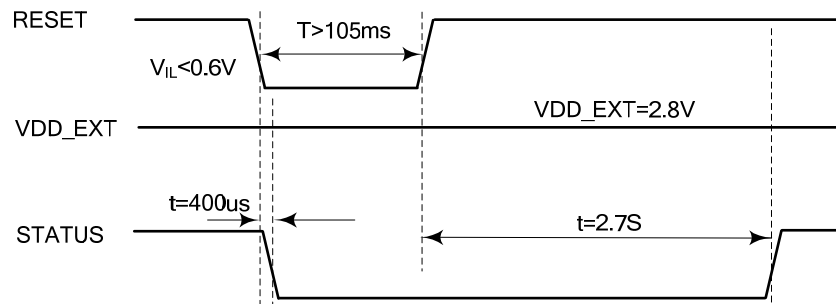


Figure 16: Reset timing

4.4 Power Saving Mode

SIM800F has two power saving modes: minimum functionality mode and sleep mode. The power consumption can be reduced to the minimum when SIM800F is in both sleep mode and minimum functionality mode.

The AT command “AT+CFUN=<fun>” can be used to set the module into minimum functionality mode. And the command “AT+CSCLK=1” or “AT+CSCLK=2” can be used to set the module into sleep mode 1 or 2. In sleep mode 1, whether the module can sleep is controlled by DTR signal, while in sleep mode 2, it is determined by serial port's RXD status.

Note: The default setting is “AT+CSCLK=0”, which do not allow the module enter sleep mode. For more details please refer to document [1].

4.4.1 Minimum Functionality Mode

There are three functionality modes, which could be set by the AT command “AT+CFUN=<fun>”. The command provides the choice of the functionality levels <fun>=0, 1, 4.

- 0: minimum functionality mode (disable RF function and SIM card function)
- 1: full functionality mode (default, no function is disabled)
- 4: flight mode (disable RF function)

If SIM800F is set to minimum functionality mode by “AT+CFUN=0”, the RF function and SIM card function will be disabled, and all AT commands correlative with RF and SIM card functions will be invalid. But the serial

port is still accessible, no matter which functionality mode it is in.

For detailed information about the AT Command “AT+CFUN=<fun>”, please refer to *document* ^[1].

Table 7: Current consumption of Minimum Functionality Mode

<fun>	BS-PA-MFRMS	Current consumption in sleep mode (mA)
0	N/A	0.55
1	9	0.85
	5	0.95
	2	1.30
4	N/A	0.60

4.4.2 Sleep Mode 1 (AT+CSCLK=1)

Users can control SIM800F module to enter or exit the sleep mode 1 (AT+CSCLK=1) by DTR signal. When DTR is in high level and without interrupt (on air and hardware such as GPIO interrupt or data in serial port), SIM800F will enter sleep mode 1 automatically. In this mode, SIM800F can still receive paging or SMS from network, but the serial port is not accessible.

4.4.3 Wake Up SIM800F from Sleep Mode 1 (AT+CSCLK=1)

When SIM800F is in sleep mode 1 (AT+CSCLK=1), the following events can wake up the module:

- DTR is pulled down
- Receive a voice or data call from network
- Receive a SMS from network

Note: After module has received incoming call or new SMS, serial port can report URC, but the serial port can not input AT command. Only after the DTR pin is pulled to low level for 50ms, the serial port can input AT command.

4.4.4 Sleep Mode 2 (AT+CSCLK=2)

In this mode, SIM800F will continuously monitor the serial port data signal. When there is no data transfer over 5 seconds on the RXD signal and there is no hardware interrupts (such as GPIO interrupt), SIM800F will enter sleep mode 2 automatically. In this mode, SIM800F can still receive paging or SMS from network.

Note: The default setting of serial port is auto baud detection, in this case, the module cannot enter sleep mode 2 before the synchronization of serial port baud rate between DTE and DCE.

4.4.5 Wake Up SIM800F from Sleep Mode 2 (AT+CSCLK=2)

When SIM800F is in sleep mode 2 (AT+CSCLK=2), the following events can wake up the module:

- Receive data via main serial port (the first several character will lose)
- Receive a voice or data call from network
- Receive a SMS from network

4.5 RTC Backup

VRTC is the power supply for RTC circuit, and its typical value is 2.8V. To allow the RTC to operate even when VBAT is turned off, it is recommended to connect the VRTC pin to a backup battery or an external large-capacitance capacitor (100uF is recommended).

When VBAT is turned on, RTC circuit is supplied from an internal LDO, and the backup battery or the external capacitor will be charged through VRTC pin.

When VBAT is turned off, RTC circuit will be supplied from the backup battery or the external capacitor.

The following figures show various references for RTC backup circuit:

- **External capacitor backup**

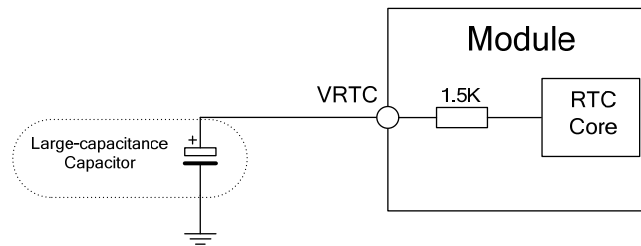


Figure 17: RTC supply from capacitor

- **Non-chargeable battery backup**

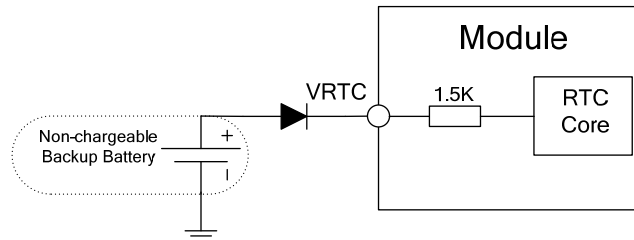


Figure 18: RTC supply from non-chargeable battery

- **Rechargeable battery backup**

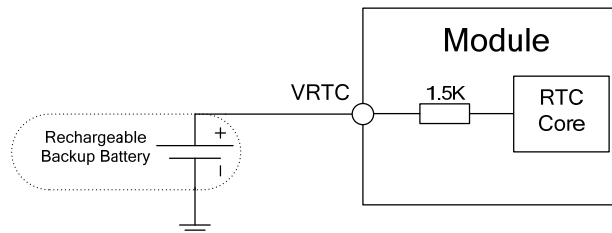


Figure 19: RTC supply from rechargeable battery

Note:

1. For electrical characteristics, please refer to Table 44: VRTC characteristics.
2. The clock error becomes larger when VBAT is turned off and RTC circuit was supplied from the backup battery or the external capacitor.

4.6 Serial Port and USB Interface

Table 8: Serial port and USB pin definition

	Name	Pin number	Function
Serial port UART1	UART1_DTR	3	Data terminal ready
	UART1_RI	4	Ring indicator
	UART1_DCD	5	Data carrier detect
	UART1_CTS	7	Clear to send
	UART1_RTS	8	Request to send
	UART1_TXD	9	Transmit data
	UART1_RXD	10	Receive data
Serial port UART2 (enabled by command)	GPIO12	68	Compatible with UART2_TXD, Transmit data
	GPIO10	51	Compatible with UART2_RXD, Receive data
USB interface	USB_VBUS	24	USB power supply
	USB_DP	27	USB data line plus
	USB_DN	28	USB data line minus

Note:

1. *Hardware flow control is disabled by default. The AT command “AT+IFC=2,2” can enable hardware flow control .The AT command “AT+IFC=0,0”can disable hardware flow control. For more details, please refer to document ^[1].*
2. *Pin 68 & 51 are configured as GPIO by default. AT command “AT+CMNRP=1” can set them to be serial port UART2.*

Table 9: Serial port characteristics

Symbol	Min	Max	Unit
V _{IL}	-0.3	0.7	V
V _{IH}	2.1	3.1	V
V _{OL}	-	0.4	V
V _{OH}	2.4	-	V

4.6.1 Function of Serial Port

Serial port UART1:

- Support modem device
- Contain data lines UART1_TXD, UART1_RXD, hardware flow control lines UART1_RTS, UART1_CTS and status lines UART1_DTR, UART1_DCD, UART1_RI
- Serial port can be used for GPRS service and AT communication
- Serial port supports the following baud rates
1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200bps
- The default setting is auto baud detection

Serial port UART2:

- Support AT command

- Serial port supports the following baud rates:
1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200bps
- The default setting is auto baud detection

Auto baud detection allows SIM800F to detect the baud rate of the host device automatically. Pay more attention to the following requirements:

- **Synchronization between DTE and DCE:**

When DCE powers on with auto baud detection enabled, firstly, users must send character “A” or “a” to synchronize the baud rate. It is recommended to send “AT” until DTE receives the “OK” response, which means DTE and DCE are correctly synchronized. For more information please refer to the AT command “AT+IPR”.

- **Restrictions of auto baud detection:**

The DTE serial port must be set at 8 data bits, no parity bit and 1 stop bit.

The URC such as "RDY", "+CFUN: 1" and "+CPIN: READY" will not be reported.

Note: User can use AT command “AT+IPR=x” to set a fixed baud rate and the setting will be saved to non-volatile flash memory automatically. After the configuration is set as fixed baud rate, the URC such as "RDY", "+CFUN: 1" and "+CPIN: READY" will be reported when SIM800F is powered on.

4.6.2 Serial Port Connection

The following figure shows the connection between module side (DCE) and customer side (DTE).

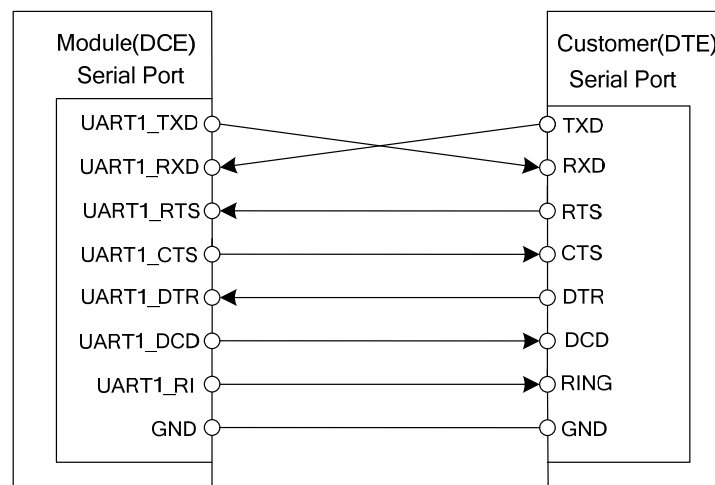


Figure 20: Connection of the serial interfaces

If the voltage level of UART is 3.3V at customer side, the following reference circuits are recommended for lower cost. If the voltage is 3.0V, please change the resistors in the following figure from 5.6K to 14K.

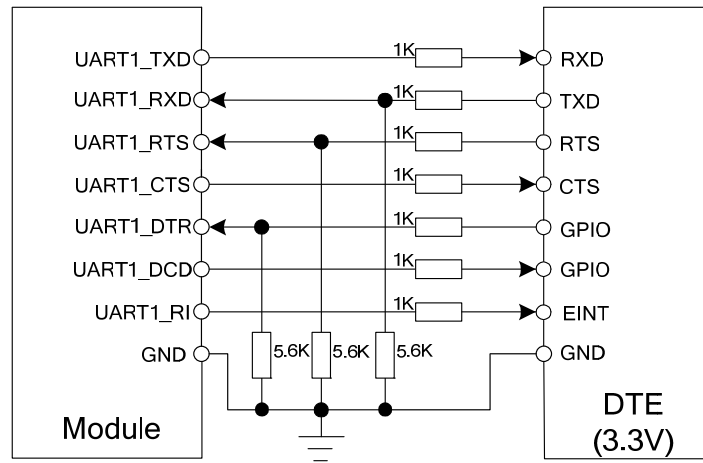


Figure 21: Level converting by resistor

If the voltage of UART is 3V or 3.3V, users also can use following reference circuits:

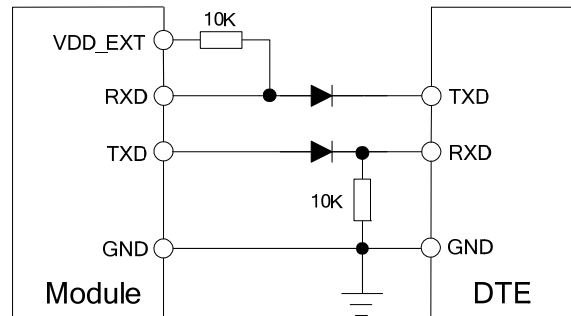


Figure 22: Level converting by diodes

Note: when diode is used for level converting, customer should check the voltage drop on the diode to make sure the signal's voltage level could meet both module and DTE's electrical character. The recommend diode is Schottky diode e.g. RB551V-30TE-17 and SDM20U40.

If the voltage of UART is 5V on customer side, users can use the following reference circuits:

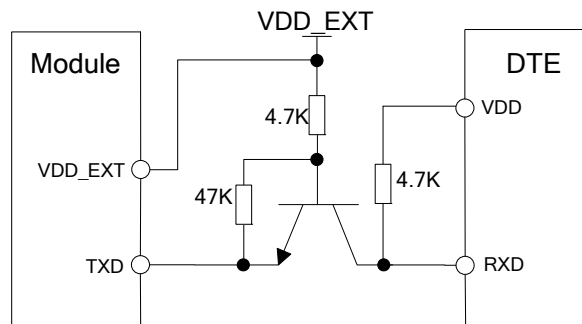


Figure 23: TX level converting by transistor

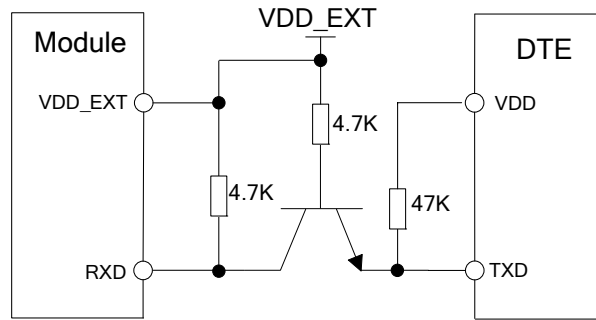


Figure 24: RX level converting by transistor

4.6.3 USB Interface

USB interface supports software debug function. When power on the module, connect VBUS, USB_DP, USB_DN and GND to PC, install the driver successfully, a com port could be recognized by PC, then customer could debug via this com port. The reference circuit is shown as below:

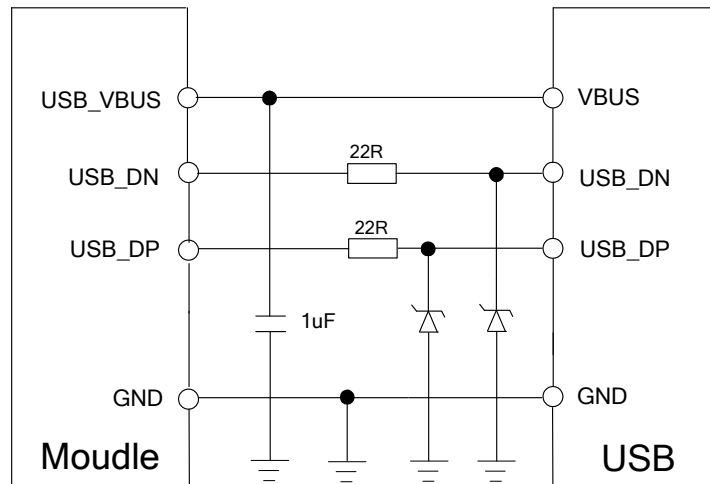


Figure 25: USB reference circuit

The maximum capacitance of TVS on USB data line should be less than 5pF (e.g. ESD9L5.0ST5G and ESD9M5.0ST5G). The USB_DP and USB_DN should be routed in differential traces.

Note: please reserve USB interface or test point for debugging.

Table 10: VBUS characteristics

Pin	Min	Typ	Max	Unit
VBUS	4.3	5.0	7.0	V

4.6.4 Software Upgrading and Debugging

Customer could upgrade module's firmware through USB or UART interface.

If upgrading through USB interface, it is necessary to power on SIM800F first, and then connect USB_VBUS, USB_DP, USB_DN, and GND to PC. There is no need to operate PWRKEY pin in the whole procedure, when SIM800F detects USB_VBUS and could communicate with USB_DP and USB_DN, it will enter USB download mode automatically.

If users upgrade the software through UART interface, it is recommended to lead the UART1_TXD, UART1_RXD, GND and PWRKEY pin to IO connector for the upgrading, and PWRKEY pin should connect to GND while upgrading. The reference connection is shown as below:

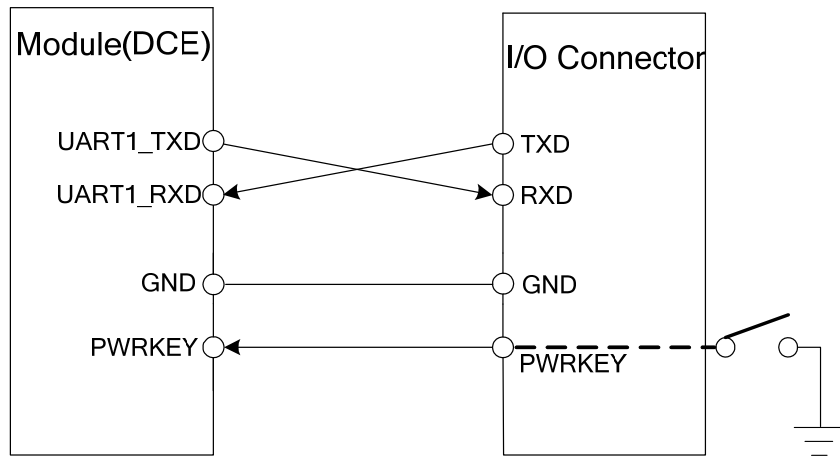


Figure 26: Connection for software upgrading and debugging through UART

UART interface does not support RS-232 level. When connect the module to the computer, the level shifter is needed.

For more details about software upgrading, please refer to *document* ^[4].

4.7 RI Behaviors

Table 11: RI Behaviors

State	RI response
Standby	High
Receive Voice call	Changed to low. But when any of the following events occur, it will be changed to high: (1) Establish the call (2) Hang up the call
Receive SMS	Changed to low, and kept low for 120ms, then changed to high.
URC	When URC are reported, this pin will be changed to low, and kept low for 120ms, then changed to high. For more details, please refer to <i>document</i> ^[8] .

The behavior of the RI pin is shown in the following figure when the module is used as a receiver.

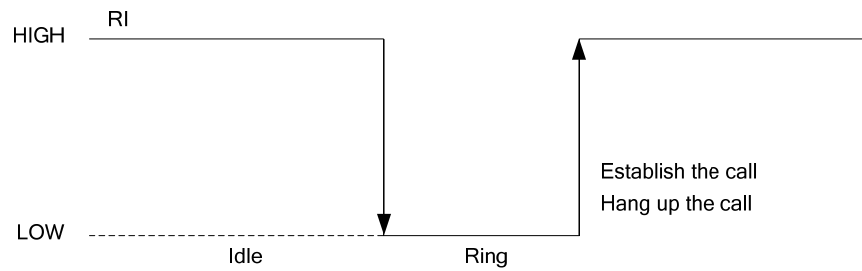


Figure 27: RI behaviour of voice calling as a receiver

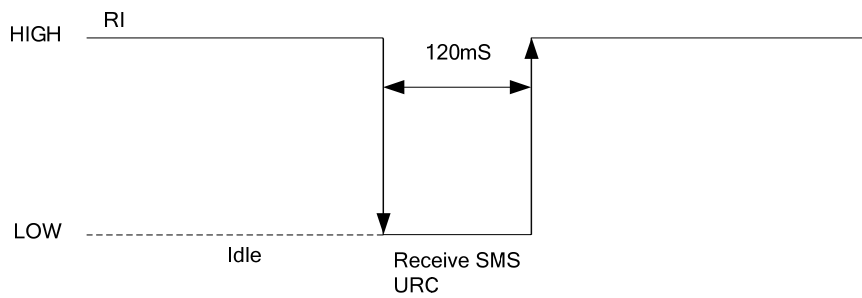


Figure 28: RI behaviour of URC or receive SMS

However, if the module is used as caller, the RI will remain high. Please refer to the following figure:

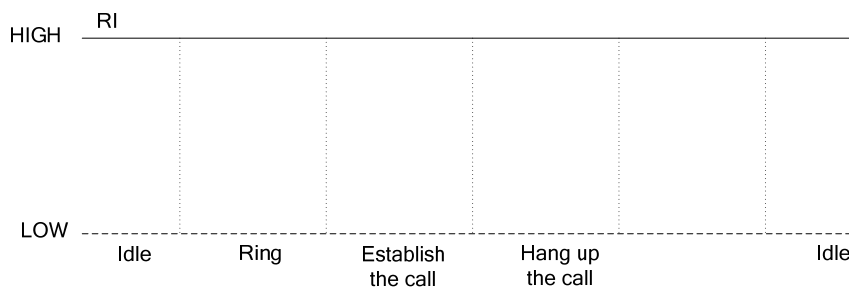


Figure 29: RI behaviour as a caller

4.8 Audio Interfaces

SIM800F provides one analog input for electronic microphone and one analog output to drive 32Ω receiver.

Table 12: Audio interface definition

	Pin name	Pin number	Function
Audio channel	MICP	19	Audio input positive
	MICN	20	Audio input negative
	SPKP	21	Audio output positive
	SPKN	22	Audio output negative

“AT+CMIC” is used to adjust the input gain level of microphone.

“AT+CLVL” is used to adjust the output gain level.

“AT+SIDET” is used to set the side-tone level.

For more details about AT command, please refer to *document*^[1] and *document*^[5].

In order to improve audio performance, the following reference circuits are recommended. The audio trace should be routed in differential and shielded by GND shown as below:

4.8.1 Speaker Reference Circuit

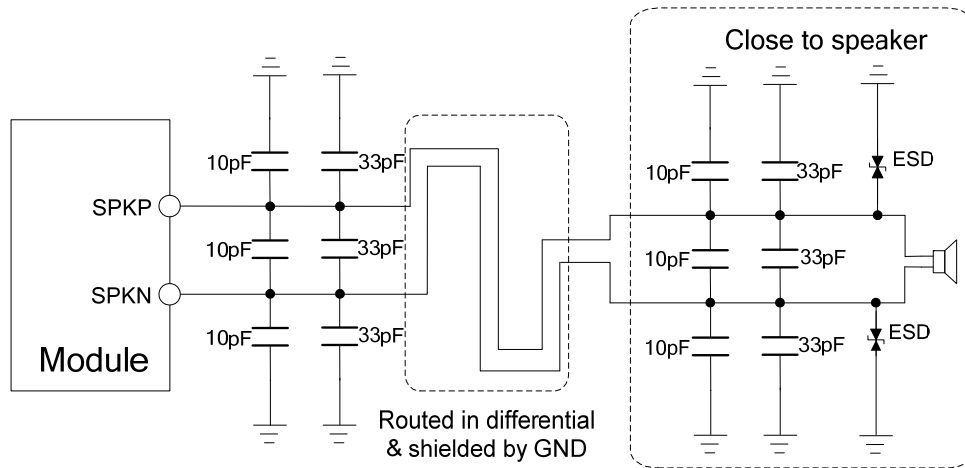


Figure 30: Speaker reference circuit

4.8.2 Microphone Reference Circuit

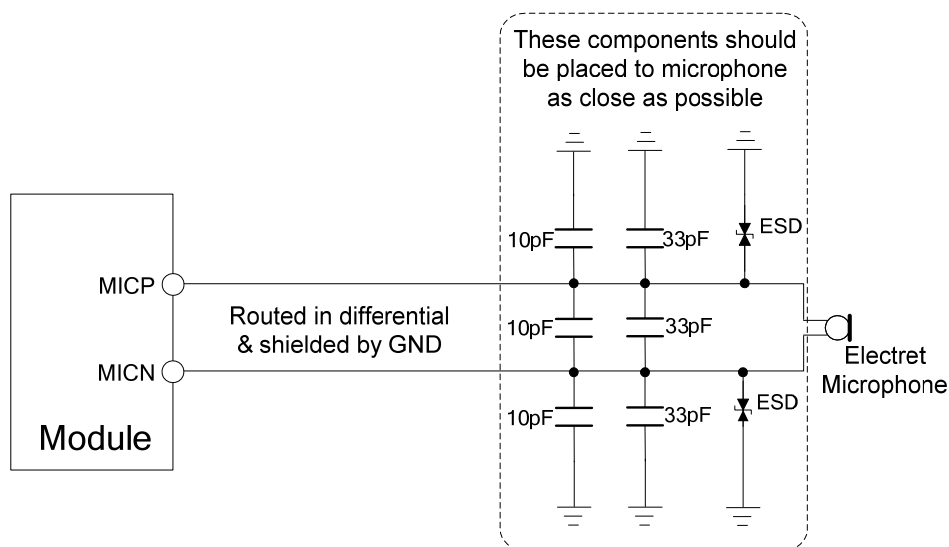


Figure 31 : Microphone reference circuit

4.8.3 Audio Electronic Characteristics

Table 13: Microphone Input Characteristics

Parameter		Min	Typ	Max	Unit
Mic biasing voltage		-	1.9	2.2	V
Working Current		-	-	2.0	mA
Input impedance(differential)		13	20	27	KΩ
Idle channel noise		-	-	-67	dBm0
SINAD	Input level:-40dBm0	29	-	-	dB
	Input level:0dBm0	-	69	-	dB

Table 14: Audio Output Characteristics

parameter	Conditions	Min	Typ	Max	Unit
Normal output	R _L =32 Ω receiver	-	15	90	mW

4.8.4 TDD

Audio signal could be interfered by RF signal. Coupling noise could be filtered by adding 33pF and 10pF capacitor to audio lines. 33pF capacitor could eliminate noise from GSM850/EGSM900MHz, while 10pF capacitor could eliminate noise from DCS1800/PCS1900Mhz frequency. Customer should develop this filter solution according to field test result.

GSM antenna is the key coupling interfering source of TDD noise. Thereat, pay attention to the layout of audio lines which should be far away from RF cable, antenna and VBAT pin. The bypass capacitor for filtering should be placed near module and another group needs to be placed near connector.

Conducting noise is mainly caused by the VBAT drop. If the audio PA was powered by VBAT directly, then there will be some cheep noise from speaker output easily. So it is better to put big capacitors and ferrite beads near audio PA input.

TDD noise has something to do with GND signal. If GND plane is not good, lots of high-frequency noises will interference microphone and speaker over bypass capacitor. So a good GND during PCB layout could avoid TDD noise.

4.9 SIM Card Interface

4.9.1 SIM Card Application

The SIM interface complies with the GSM Phase 1 specification and the new GSM Phase 2+ specification for FAST 64 kbps SIM card. Both 1.8V and 3.0V SIM card are supported.

Table 15: SIM pin definition

Pin name	Pin number	Function
SIM_VDD	18	Voltage supply for SIM card. Support 1.8V or 3V SIM card
SIM_DATA	15	SIM data input/output
SIM_CLK	16	SIM clock
SIM_RST	17	SIM reset
SIM_DET	14	SIM card detection

The SIM_DET pin is used for SIM card detection. Users can select the 8-pin SIM card holder to implement this function. AT command “AT+CSDT” is used to enable or disable SIM card detection function. For details of this AT command, please refer to *document* ^[1].

It is recommended to place an ESD protection component close to the SIM card holder, such as SMF15C provided by ON SEMI (www.onsemi.com). The reference circuit of the 8-pin SIM card holder is illustrated as below:

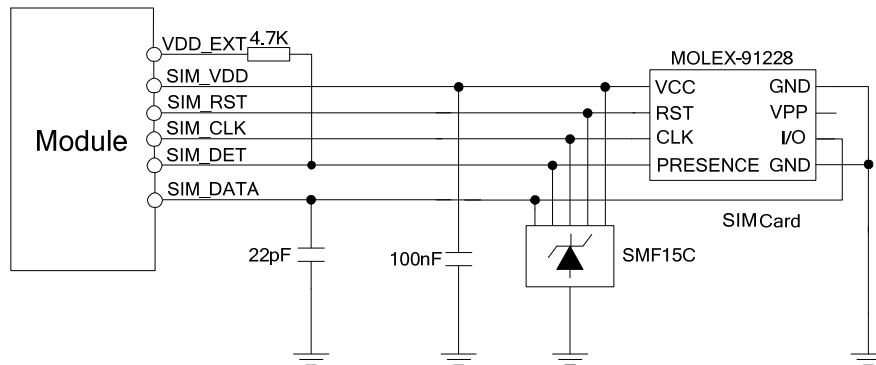


Figure 32: Reference circuit of the 8-pin SIM card holder

If the SIM card detection function is not used, users can keep SIM_DET pin open. The reference circuit of 6-pin SIM card holder is illustrated as below:

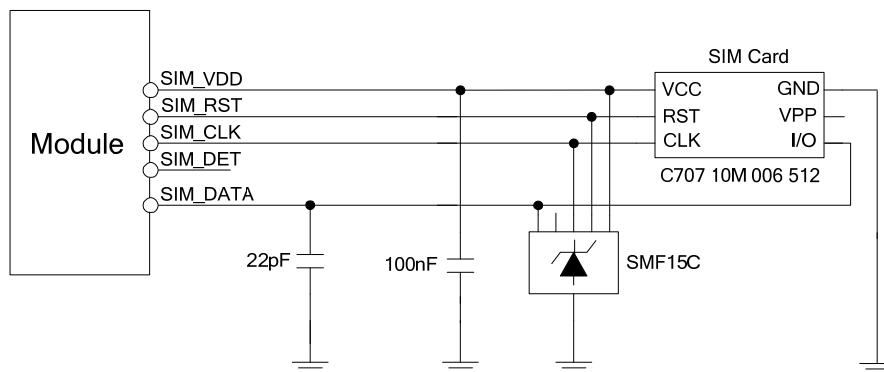


Figure 33: Reference circuit of the 6-pin SIM card holder

Note: 51Ω series resistors are not needed for SIM_RST/SIM_CLK/SIM_DATA, which are build-in already.

4.9.2 SIM Card Circuit Design Guide

SIM card signal could be interfered by the high speed signal, it is recommended to follow these guidelines while designing:

- SIM card holder should be far away from GSM antenna
- SIM traces should keep away from RF lines, VBAT and high-speed signal lines
- The traces should be as short as possible
- Keep SIM card holder's GND connect to main ground directly
- Shielding the SIM card signal by ground well
- Recommended to place a 100nF capacitor on SIM_VDD line and keep close to the SIM card holder
- Parasitic capacitance of TVS on SIM_CLK/SIM_DATA should less than 50pF

4.9.3 Design Considerations for SIM Card Holder

For 8 pins SIM card holder, SIMCom recommends to use Molex 91228. Customer can visit <http://www.molex.com> for more information about the holder.

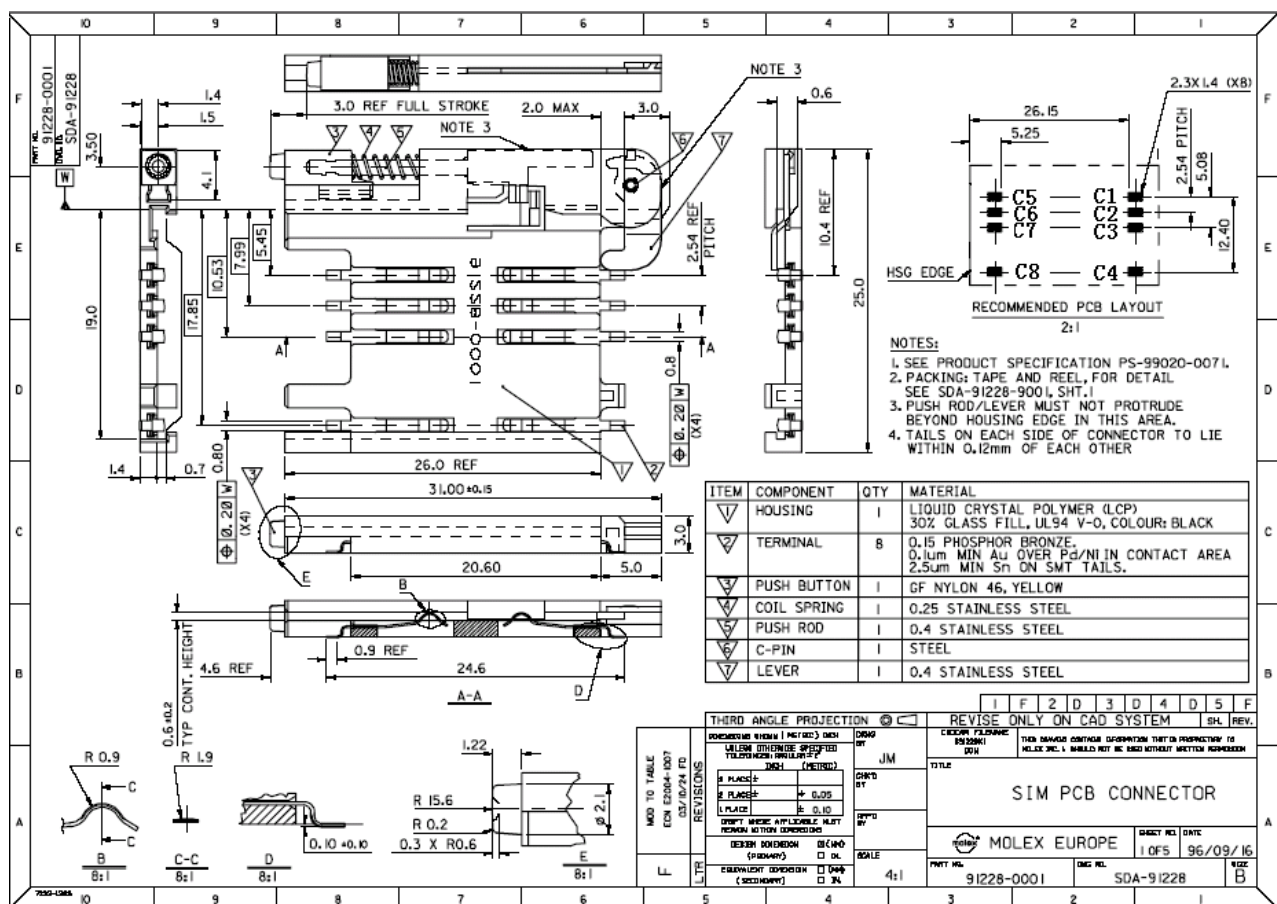


Figure 34: Molex 91228 SIM card holder

Table 16: Pin description (Molex SIM card holder)

Pin name	Signal	Description
C1	SIM_VDD	SIM card power supply

C2	SIM_RST	SIM card reset
C3	SIM_CLK	SIM card clock
C4	GND	Connect to GND
C5	GND	Connect to GND
C6	VPP	Not connect
C7	SIM_DATA	SIM card data I/O
C8	SIM_DET	Detect SIM card presence

For 6-pin SIM card holder, SIMCom recommends to use Amphenol C707 10M006 5122. Users can visit <http://www.amphenol.com> for more information about the holder.

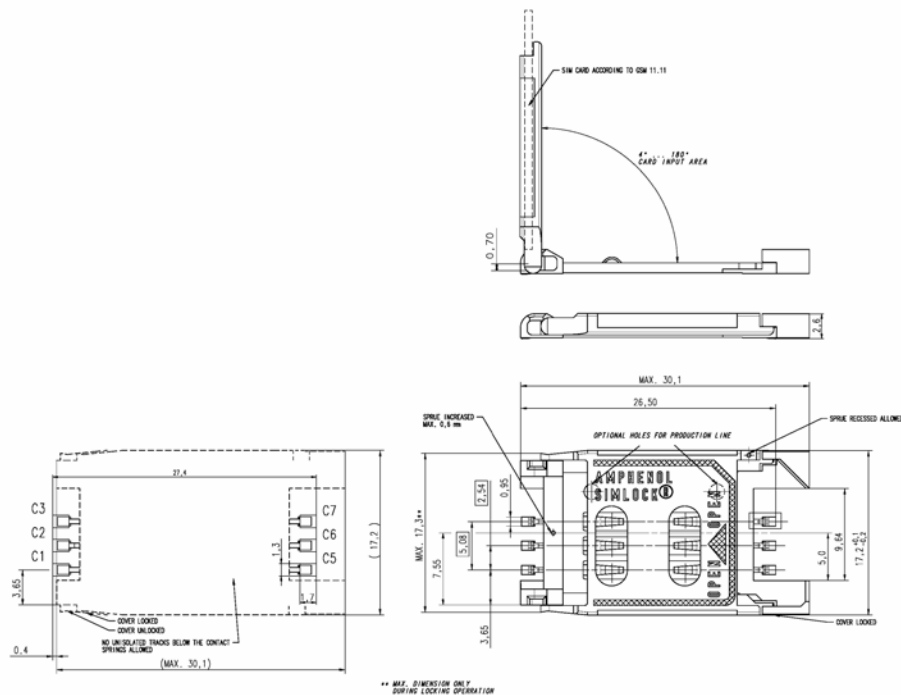


Figure 35: Amphenol C707 10M006 5122 SIM card holder

Table 17: Pin description (Amphenol SIM card holder)

Pin name	Signal	Description
C1	SIM_VDD	SIM card power supply
C2	SIM_RST	SIM card reset
C3	SIM_CLK	SIM card clock
C5	GND	Connect to GND
C6	VPP	Not connect
C7	SIM_DATA	SIM card data I/O


4.10 DISP Interface

SIM800F provides a serial display interface.

Table 18: Pin definition of DISP interface

Pin name	Pin number	Description
DISP_CLK	11	Display clock
DISP_DATA	12	Display data
DISP_D/C	13	Data/command select
DISP_CS	14	Chip select

For the connection between LCD and SIM800F module, please refer to below figure:

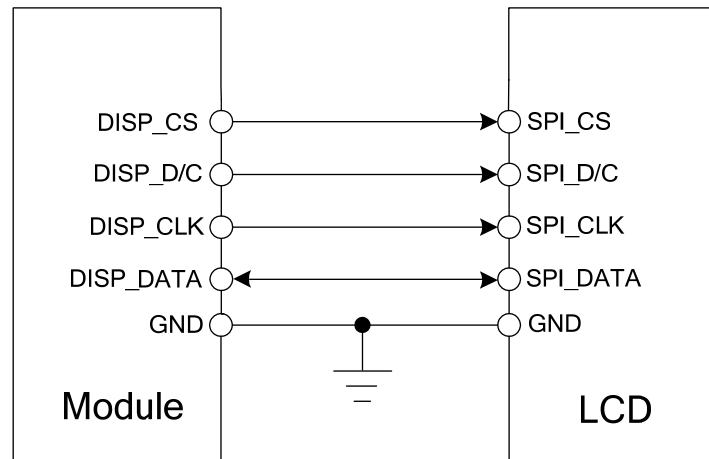**Figure 36: Connection of DISP interface**

It could also be used as other function in some applications.

Table 19: DISP Multiplexing function

Pin Name	Pin Number	Mode0 (default)	Mode 1	Mode 2	Mode 3
DISP_CLK	11	GPIO	DISP_CLK	SPI_CLK	PCM_IN
DISP_DATA	12	GPIO	DISP_DATA	SPI_MOSI	PCM_OUT
DISP_D/C	13	GPIO	DISP_D/C	SPI_MISO	PCM_SYNC
DISP_CS	14	GPIO	DISP_CS	SPI_CS	PCM_CLK

Note: These functions are not supported in the standard firmware. If you need, please contact SIMCom.

4.11 Keypad Interface

The keypad interface consists of 5 keypad column outputs and 4 keypad row inputs, supports total 20 keys.

Table 20: Pin definition of the keypad interface

Pin Name	Pin Number	Mode 0(default)	Mode 1
KBR4	40	GPIO	KBR4
KBR3	41	GPIO	KBR3
KBR2	42	GPIO	KBR2

KBR1	43	GPIO	KBR1
KBR0	44	GPIO	KBR0
KBC4	47	GPIO	KBC4
KBC3	48	GPIO	KBC3
KBC2	49	GPIO	KBC2
KBC1	50	GPIO	KBC1

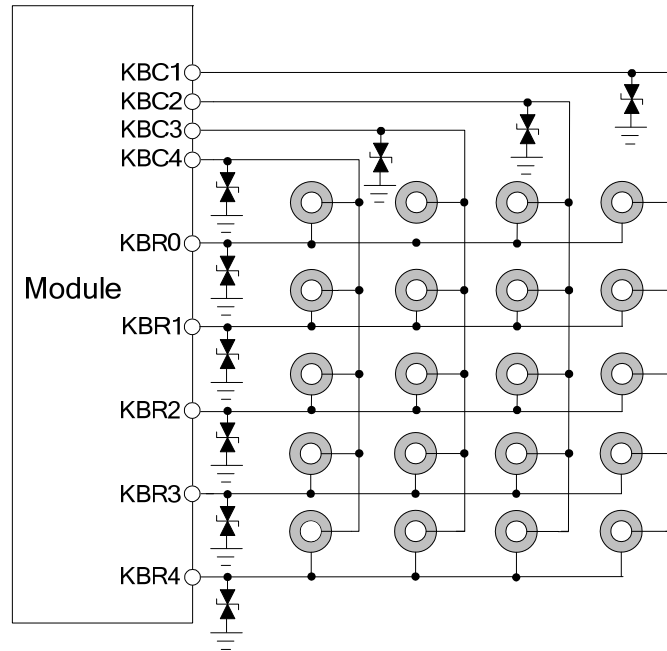


Figure 37: Reference circuit of the keypad interface

Note: keypad function is not supported in the standard firmware. If you need, please contact SIMCom..

4.12 GPIO

SIM800F provides 3 GPIO, which could be used as RF_SYNC/JD and UART2.

For GPIO function, both output and input voltage level of the GPIO can be set by the AT command “AT+SGPIO” or “AT+CGPIO”. For more details, please refer to *document* ^[1].

Table 21: Pin definition of the GPIO

Pin Name	Pin Number	Default Function	Default State
GPIO10	51	GPIO	Output, Pull down
GPIO11	67	GPIO	Output, Pull down
GPIO12	68	GPIO	Output, Pull down

4.12.1 RF_SYNC/JD

RF synchronization signal could indicate the incoming GSM burst. The timing is shown as below:

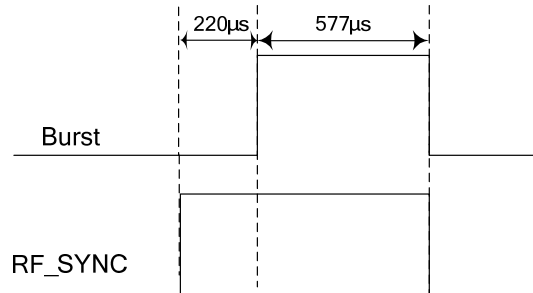


Figure 38: RF_SYNC signal during transmit burst

GPIO11 can also be used to indicate the RF jamming. The RF_SYNC function and RF Jamming Detection function can be switched by AT+SJDR command. For more details, please refer to *document* ^[1].

Table 22: GPIO11 Multiplexing function

Pin Name	Pin Number	Mode 0(default)	Mode 1	Mode 2
GPIO11	67	GPIO	RF_SYNC	JD (RF jamming detection)

Note:

1. Do not pull up GPIO11.
2. This function is not supported in the standard firmware. If you need, please contact SIMCom.

4.12.2 UART2_RXD/TXD

For details, please refer to chapter 4.6.

Table 23: Pin definition of UART2_RXD/TXD

Pin Name	Pin Number	Mode 0(default)	Mode 1
GPIO10	51	GPIO	UART2_RXD
GPIO12	68	GPIO	UART2_TXD

4.13 I2C BUS

The SIM800F provides an I2C interface, which supports the master role and conforms to the I2C specification. The features of I2C interface are listed as below:

- Compliant master mode operation
- Adjustable clock speed for F/S mode operation
- Support 7-bit/10-bit addressing

- Support high speed mode
- Support slave clock extension
- START/STOP/REPEATED condition
- Manual transfer mode
- Multi-bytes write per transfer (up to 8 data bytes for non-DMA mode)
- Multi-bytes read per transfer (up to 8 data bytes for non-DMA mode)
- Multi-transfer per transaction
- Combined format transfer with length change capability
- Active drive/write-and I/O configuration

Table 24: Pin definition of the I2C

Pin name	Pin number	Description
SDA	37	I2C bus data
SCL	38	I2C bus clock

Note:

1. I2C has been pulled up to 2.8V via 4.7K Ω internally.
2. I2C function is not supported in the standard firmware. If you need, please contact SIMCom.

Table 25: I2C multiplex function

Pin name	Pin number	Mode 0(default)	Mode 1
SDA	37	GPIO	SDA
SCL	38	GPIO	SCL

4.14 ADC

Table 26: Pin definition of ADC

Pin name	Pin number	Description
ADC	25	Analog to digital converter

SIM800F provides an auxiliary ADC, which can be used to measure the voltage. Users can use AT command “AT+CADC” to read the voltage value. For details about this AT command, please refer to *document* ^[1].

Table 27: ADC specification

Parameter	Min	Typ	Max	Unit
Voltage range	0	-	2.8	V
ADC Resolution	-	10	-	bits
Sampling rate	-	-	1.0833	MHz
ADC precision	-	10	30	mV

4.15 Network Status Indication

Table 28: Pin definition of the STATUS

Pin name	Pin number	Description
NETLIGHT	52	Network status indication

The NETLIGHT pin can drive one LED to indicate network status, which are listed in the following table:

Table 29: Status of the NETLIGHT pin

Status	SIM800F behavior
Off	Powered off
64ms On/ 800ms Off	Not registered to the network
64ms On/ 3000ms Off	Registered to the network
64ms On/ 300ms Off	GPRS communication is established

A reference circuit is recommended in the following figure:

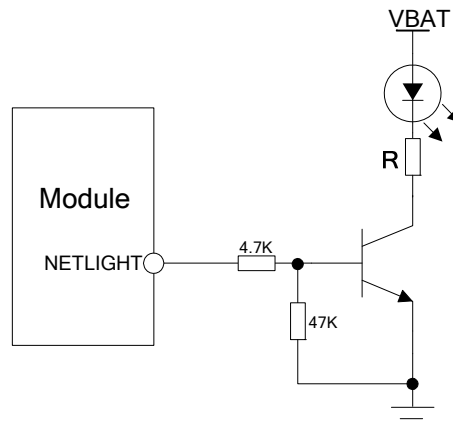


Figure 39: Reference circuit of NETLIGHT

Table 30: NETLIGHT multiplex function

Pin name	Pin number	Mode 0(default)	Mode 1
NETLIGHT	52	NETLIGHT	GPIO

4.16 Power On Status Indication

The STATUS pin indicates the power on status of module. The pin outputs high when module is powered on, outputs low when module is powered off.

Table 31: Pin definition of the STATUS

Pin name	Pin number	Description
STATUS	66	Power on status indication

Table 32: STATUS multiplex function

Pin name	Pin number	Mode 0(default)	Mode 1
STATUS	66	STATUS	GPIO

4.17 PWM

Table 33: Pin definition of the PWM

Pin name	Pin number	Description
PWM1	35	PWM1
PWM2	36	PWM2

PWM output frequency varies from 0 to 2KHz. Two 7-bit unsigned binary parameters are used for the output period and for the duty cycle. The AT command “AT + SPWM” is used to set the output period and duty cycle of the PWM. For details, please refer to *document* ^[1].

A typical circuit of the PWM drives buzzer is shown in the following figure:

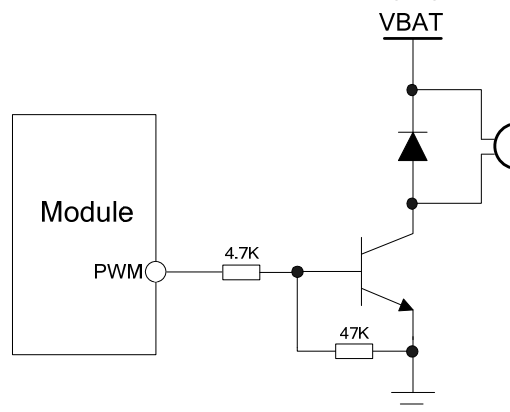


Figure 40: Reference circuit of PWM drive buzzer

Table 34: PWM output characteristics

Parameter	Min	Typ	Max	Unit
Working voltage	2.5	2.8	2.9	V
Working current		4	16	mA

Note: PWM pin must keep low when module is in the boot process.

Table 35: PWM multiplex function

Pin name	Pin number	Mode 0(default)	Mode 1
PWM1	35	PWM1	GPIO
PWM2	36	PWM2	GPIO

4.18 KPLED

SIM800F provides one open-drain LED driver pin.

Table 36: Pin definition of the KPLED

Pin name	Pin number	Description
KPLED	23	Sink current for keypad LED

Reference circuit is recommended in the following figure:

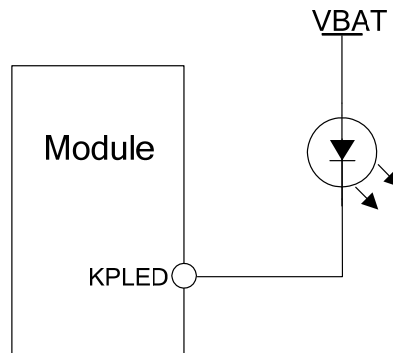


Figure 41: KPLED driver reference circuit

Table 37: KPLED specification

Pin name	Min	Typ	Max	Unit
KPLED	-	-	60	mA

4.19 Bluetooth

SIM800F supports Bluetooth function which can be operated by AT commands conveniently. For detail commands about Bluetooth please refer to *document* ^[1]

The features of Bluetooth are listed as below:

- Fully compliant with Bluetooth specification 3.0
- Support operation with GPS and GSM/GPRS worldwide radio systems
- Fully integrated PA provides 10dbm output power
- Up to 4 simultaneous active ACL links
- Support sniff mode
- Supports PCM interface and built-in programmable transcoders for liner voice with transmission

4.20 Antenna Interface

There are two antenna interfaces, GSM_ANT and BT_ANT.

- The input impedance of the antenna should be 50Ω, and the VSWR should be less than 2
- It is recommended that the GSM antenna and the BT antenna should be placed as far as possible
- The isolations of the two antenna should be bigger than 30dB

Note: About the RF trace layout please refer to "AN_SMT Module_RF_Reference_Design_Guide"

4.20.1 GSM Antenna Interface

SIM800F provides a GSM antenna named GSM_ANT, customer could use 50 Ω microstrip line or stripline antenna connect to the module.

It is recommended to reserve the matching circuit as following:

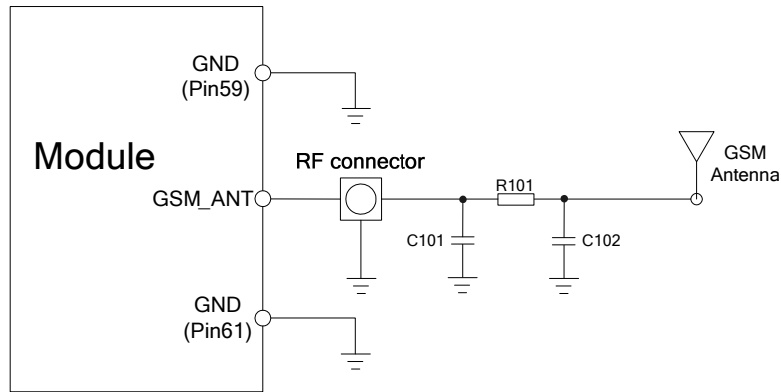


Figure 42: GSM antenna matching circuit

R101, C101, C102 are the matching circuit, the value should be defined by the antenna design. Normally R101 is 0 Ω , C101 and C102 are not mounted.

The RF connector is used for conduction test. If the space between RF pin and antenna is not enough, the matching circuit should be designed as in the following figure:

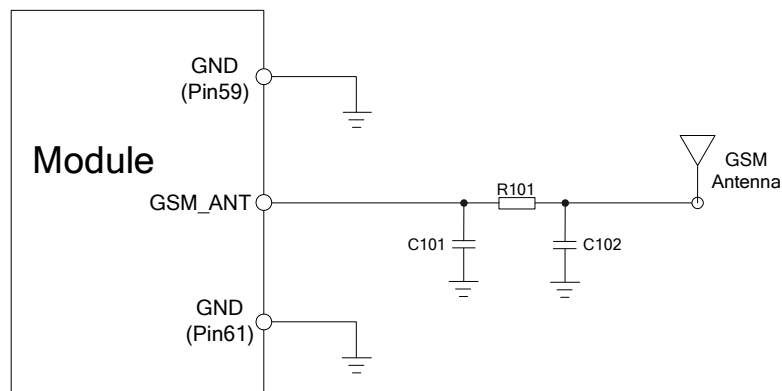


Figure 43: GSM antenna matching circuit without RF connector

Normally R101 is 0 Ω ; C101 and C102 are not mounted.

4.20.2 Bluetooth Antenna Interface

For Bluetooth antenna, it is recommended to reserve the matching circuit as following:

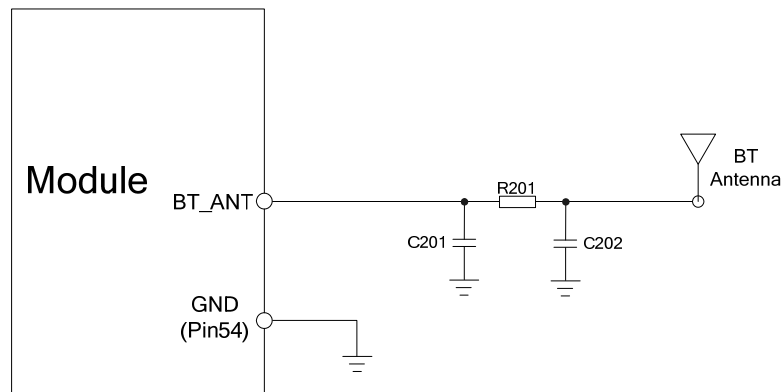


Figure 44: Bluetooth antenna matching circuit

R201, C201, C202 are the matching circuit, the values depend on antenna debug result. Normally R201 is 0Ω , C201 and C202 are not mounted.

There are some suggestions for placing components and RF trace for GSM_ANT/BT_ANT:

- The RF connector is used for conducted test, so keep it as close to pin GSM_ANT as possible
- Antenna matching circuit should be close to the antenna
- Keep the RF traces impedance as 50Ω
- The RF traces should be kept far away from the high frequency signals and strong interference source

5 PCB Layout

Usually, most electronic products with good performance are based on good PCB layout. Poor PCB layout will lead to lots of issues, like TDD noise, SIM card undetected, etc. The final solution for these problems is to redo PCB layout. Making good PCB layout will save developing schedule and cost as well.

This section will give some guidelines on PCB layout to eliminate interfere or noise by greatest degree, and save product development period.

5.1 PIN Assignment

Before the placement of the PCB design, customer should learn well about PIN assignment in order to get reasonable layout with so many external components. Please refer to the figure below:

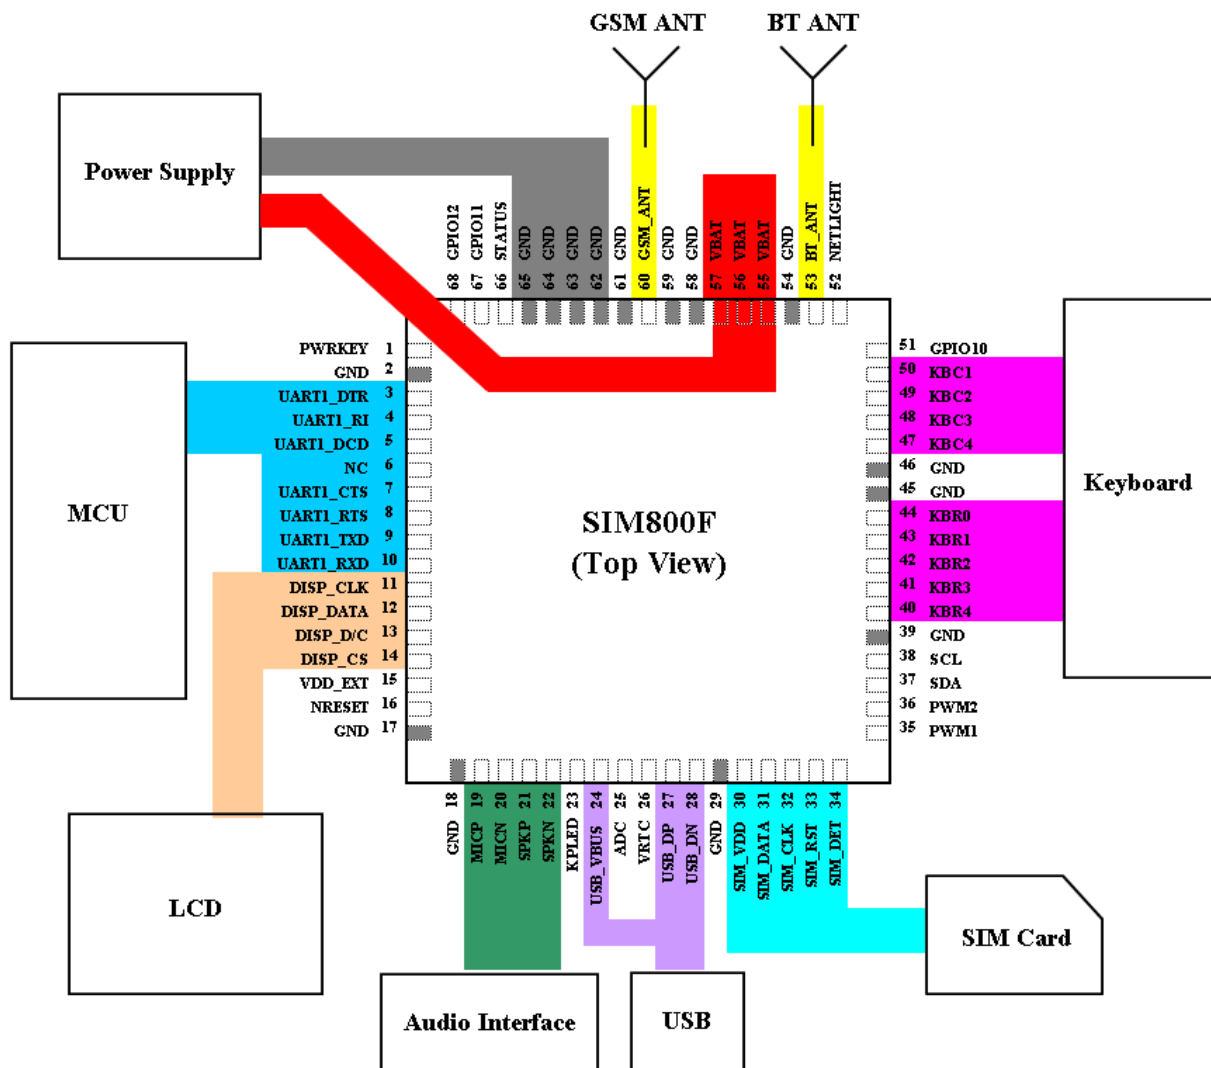


Figure 45: Pin assignment

5.2 Principle of PCB Layout

During layout, we should pay attention to the following interfaces, such as Antenna, power supply, SIM card interface, audio interface and so on.

5.2.1 Antenna

- The length of trace between pin output and connector should be as short as possible
- Do not trace RF signal over across the board
- The RF signal should be far away from SIM card, power ICs

5.2.2. Power Supply

- Not only VBAT but also return GND are very important in layout
- The positive line of VBAT should be as short and wide as possible
- The correct flow from source to VBAT pin should go through Zener diode then huge capacitor
- Pin 36 and Pin37 are GND signals, and shortest layout to GND of power source should be designed
- There are 10 GND pads in the module; these pads could enhance the GND performances. On the upper layer of these pads, do not trace any signal if possible

5.2.3 SIM Card Interface

- SIM card holder has no anti-EMI component inside. Thus SIM card interface maybe interfered, please pay more attention on this interface during layout
- Ensure SIM card holder is far way from antenna or RF cable inside
- Put SIM card holder near the module, as nearer as possible
- Add ESD component to protect SIM_CLK, SIM_DATA, SIM_RST and SIM_VDD signals which should be far away from power and high-speed-frequency signal

5.2.4 Audio Interface

- The signal trace of audio should far away from antenna and power
- The audio signal should avoid to parallel with VBAT trace

5.2.5 Others

- It is better to trace signal lines of UART bunched, as well as signals of USB.

6 Electrical, Reliability and Radio Characteristics

6.1 Absolute Maximum Ratings

The absolute maximum ratings stated in following table are stress ratings under non-operating conditions. Stresses beyond any of these limits will cause permanent damage to SIM800F.

Table 38: Absolute maximum ratings

Symbol	Parameter	Min	Typ	Max	Unit
VBAT	VBAT power supply voltage	-0.3	-	4.5	V
VBUS	USB power supply voltage	-0.3	-	7.0	V
I _I	Digital interface input current	-	4	16	mA
I _O	Digital interface output current	-	4	16	mA

6.2 Recommended Operating Conditions

Table 39: Recommended operating conditions

Symbol	Parameter	Min	Typ	Max	Unit
VBAT	Power supply voltage	3.4	4.0	4.4	V
T _{OPER}	Operating temperature	-40	+25	+85	°C
T _{STG}	Storage temperature	-45	-	+90	°C

6.3 Digital Interface Characteristics

Table 40: Digital interface characteristics

Symbol	Parameter	Min	Typ	Max	Unit
V _{IH}	High-level input voltage	2.4	-	-	V
V _{IL}	Low-level input voltage	-	-	0.4	V
V _{OH}	High-level output voltage	2.7	-	-	V
V _{OL}	Low-level output voltage	-	-	0.1	V

Note: These parameters are for digital interface pins, such as keypad, GPIO, I2C, UART, LCD, and PWM.

6.4 SIM Card Interface Characteristics

Table 41: SIM card interface characteristics

Symbol	Parameter	Min	Typ	Max	Unit
I _{IH}	High-level input current	-10	-	10	uA
I _{IL}	Low-level input current	-10	-	10	uA
V _{IH}	High-level input voltage	1.4	-	-	V

		2.4	-	-	V
V_{IL}	Low-level input voltage	-	-	0.4	V
				2.4	V
V_{OH}	High-level output voltage	1.7	-	-	V
		2.7	-	-	V
V_{OL}	Low-level output voltage	-	-	0.1	V
		-	-	0.1	V

6.5 SIM_VDD Characteristics

Table 42: SIM_VDD characteristics

Symbol	Parameter	Min	Typ	Max	Unit
V_O	Output voltage	2.75	2.9	3.00	V
		1.65	1.80	1.95	
I_O	Output current	-	-	10	mA

6.6 VDD_EXT Characteristics

Table 43: VDD_EXT characteristics

Symbol	Parameter	Min	Typ	Max	Unit
V_O	Output voltage	2.70	2.80	2.95	V
I_O	Output current	-	-	10	mA

6.7 VRTC Characteristics

Table 44: VRTC characteristics

Symbol	Parameter	Min	Typ	Max	Unit
V_{RTC-IN}	VRTC input voltage	2.00	3.00	3.15	V
I_{RTC-IN}	VRTC input current	-	2	-	uA
$V_{RTC-OUT}$	VRTC output voltage	-	3.00	-	V
$I_{RTC-OUT}$	VRTC output current	-	10	-	uA

6.8 Current Consumption (VBAT = 4V)

Table 45: Current consumption

Symbol	Parameter	Conditions	Min	Typ	Max	Unit
VBAT	Voltage			4.0		V
	Power drop	PCL=5			350	mV
	Voltage ripple	PCL=5 @ f<200kHz @ f>200kHz			50 2.0	mV mV
I _{VBAT}	Average current	Power down mode		130		uA
		Sleep mode (AT+CFUN=1): (BS-PA-MFRMS=9) (BS-PA-MFRMS=5) (BS-PA-MFRMS=2)		0.85 0.95 1.30		mA mA mA
		Idle mode (AT+CFUN=1): GSM850 EGSM900 DCS1800 PCS1900		12.1 12.1 12.1 12.1		mA mA mA mA
		Voice call (PCL=5): GSM850 EGSM900 Voice call (PCL=0): DCS1800 PCS1900		200 217 137 140		mA mA mA mA
		Data mode GPRS (1Rx,4Tx): GSM850 EGSM900 DCS1800 PCS1900		321 408 281 300		mA mA mA mA
		Data mode GPRS (3Rx,2Tx): GSM850 EGSM900 DCS1800 PCS1900		318 347 218 227		mA mA mA mA
		Data mode GPRS (4Rx,1Tx): GSM850 EGSM900 DCS1800 PCS1900		213 231 156 160		mA mA mA mA
I _{MAX}	Peak current	During TX burst			2.0	A

Note: The data above are the typical value tested in laboratory. In the mass production stage, there are differences among each individual.

6.9 Electro-Static Discharge

SIM800F is an ESD sensitive component, so more attention should be paid to the procedure of handling and packaging. The ESD characteristics are shown in the following table:

Table 46: The ESD characteristics (Temperature: 25°C, Humidity: 45 %)

Pin	Contact discharge	Air discharge
VBAT	±6KV	±12KV
GND	±6KV	±12KV
UART1_RXD/TXD	±4KV	±8KV
Antenna port	±6KV	±12KV
SPKP/ SPKN MICP/ MICN	±3KV	±6KV
PWRKEY	±4KV	±8KV

6.10 Radio Characteristics

6.10.1 Module RF Output Power

The following table shows the module conducted output power, it is followed by the 3GPP TS 05.05 technical specification requirement:

Table 47: SIM800F GSM 850 and EGSM 900 conducted RF output power

GSM 850 and EGSM 900			
PCL	Nominal output power (dBm)	Tolerance (dB) for conditions	
		Normal	Extreme
0-2	39	±2	±2.5
3	37	±3	±4
4	35	±3	±4
5	33	±3	±4
6	31	±3	±4
7	29	±3	±4
8	27	±3	±4
9	25	±3	±4
10	23	±3	±4
11	21	±3	±4
12	19	±3	±4
13	17	±3	±4
14	15	±3	±4
15	13	±3	±4

16	11	±5	±6
17	9	±5	±6
18	7	±5	±6
19-31	5	±5	±6

Table 48: SIM800F DCS 1800 and PCS 1900 conducted RF output power

DCS 1800 and PCS 1900			
PCL	Nominal output power (dBm)	Tolerance (dB) for conditions	
		Normal	Extreme
29	36	±2	±2.5
30	34	±3	±4
31	32	±3	±4
0	30	±3	±4
1	28	±3	±4
2	26	±3	±4
3	24	±3	±4
4	22	±3	±4
5	20	±3	±4
6	18	±3	±4
7	16	±3	±4
8	14	±3	±4
9	12	±4	±5
10	10	±4	±5
11	8	±4	±5
12	6	±4	±5
13	4	±4	±5
14	2	±5	±6
15-28	0	±5	±6

6.10.2 Module RF Receive Sensitivity

The following table shows the module's conducted receive sensitivity, it is tested under static condition:

Table 49: SIM800F conducted RF receive sensitivity

Frequency	Receive sensitivity (Typical)	Receive sensitivity(Max)
GSM850	-109dBm	-107dBm
EGSM900	-109dBm	-107dBm
DCS1800	-109dBm	-107dBm
PCS1900	-109dBm	-107dBm

6.10.3 Module Operating Frequencies

The following table shows the module's operating frequency range, it is followed by the 3GPP TS 05.05 technical specification requirement.

Table 50: SIM800F operating frequencies

Frequency	Receive	Transmit
GSM850	869 ~ 894MHz	824 ~ 849 MHz
EGSM900	925 ~ 960MHz	880 ~ 915MHz
DCS1800	1805 ~ 1880MHz	1710 ~ 1785MHz
PCS1900	1930 ~ 1990MHz	1850 ~ 1910MHz

7 Manufacturing

7.1 Top and Bottom View of SIM800F



Figure 46: Top and bottom view of SIM800F

7.2 Typical Solder Reflow Profile

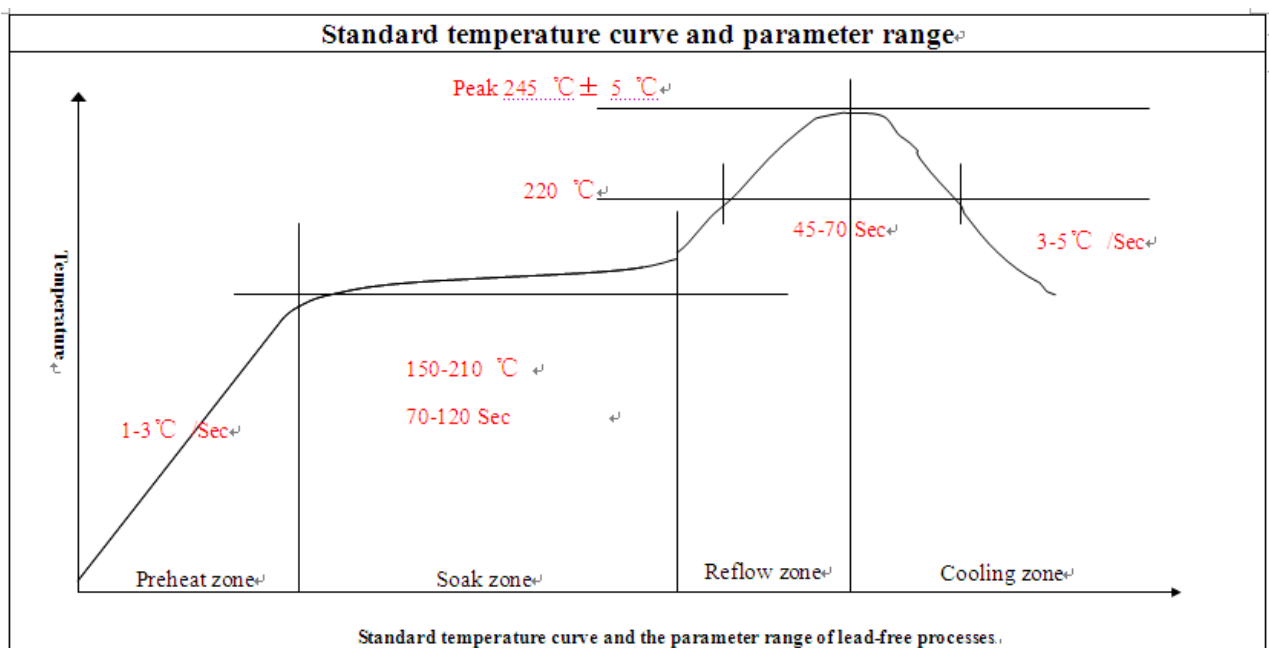


Figure 47: Typical Solder Reflow Profile

Note: Please refer to “Module secondary-SMT-UGD” for more information about the module shipping and manufacturing.

7.1. The Moisture Sensitivity Level

The moisture sensitivity level of SIM800 is 3. The module should be mounted within 168 hours after unpacking in the environmental conditions of temperature $<30^{\circ}\text{C}$ and relative humidity of $<60\%$ (RH). It is necessary to bake the module if the above conditions are not met.

Table 51: Moisture classification level and floor life

Level	Floor Life (out of bag) at factory ambient $\leq 30^{\circ}\text{C}$ /60% RH or as stated
1	Unlimited at $\leq 30^{\circ}\text{C}$ /85% RH
2	1 year
2a	4 weeks
3	168 hours
4	72 hours
5	48 hours
5a	24 hours
6	Mandatory bake before use. After bake, it must be reflowed within the time limit specified on the label.

Note:

- If the vacuum package is not open for 6 months or longer than the packing date, baking is also recommended before re-flow soldering.*
- For product handling, storage, processing, IPC / JEDEC J-STD-033 must be followed.*

7.2. Baking Requirements

Because of its sensitivity to moisture absorption, SIM800 should be baked sufficiently before re-flow soldering. Otherwise SIM800 will be at the risk of permanent damage during re-flow soldering. SIM800 should be baked 192 hours at temperature $40^{\circ}\text{C} \pm 5^{\circ}\text{C}$ / -0°C and $<5\%$ RH for low-temperature device containers, or 72 hours at temperature $80^{\circ}\text{C} \pm 5^{\circ}\text{C}$ for high-temperature device containers. Note that the plastic tray is not heat resistant, so SIM800 modules should be taken out for baking, otherwise the tray may be damaged by high-temperature during baking.

Table 52: Baking requirements

Baking temperature	Moisture	Time
$40^{\circ}\text{C} \pm 5^{\circ}\text{C}$	$<5\%$	192 hours
$120^{\circ}\text{C} \pm 5^{\circ}\text{C}$	$<5\%$	4 hours

8. Appendix

I. Related Documents

Table 53: Related Documents

SN	Document name	Remark
[1]	SIM800 Series_AT Command Manual_V1.00.doc	
[2]	ITU-T Draft new recommendation V.25ter:	Serial asynchronous automatic dialing and control
[3]	GSM 07.07:	Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME)
[4]	GSM 07.10:	Support GSM 07.10 multiplexing protocol
[5]	GSM 07.05:	Digital cellular telecommunications (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)
[6]	GSM 11.14:	Digital cellular telecommunications system (Phase 2+); Specification of the SIM Application Toolkit for the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[7]	GSM 11.11:	Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[8]	GSM 03.38:	Digital cellular telecommunications system (Phase 2+); Alphabets and language-specific information
[9]	GSM 11.10	Digital cellular telecommunications system (Phase 2); Mobile Station (MS) conformance specification; Part 1: Conformance specification
[10]	AN_Serial Port	AN_Serial Port
[11]	AN_SIM900_TCPIP	TCP/IP Applications User Manual
[12]	Module secondary-SMT-UGD	
[13]	AN_SMT Module_RF_Reference Design_Guide	
[14]	SIM800_EVB kit_User Guide_VX.XX	

II. Multiplex Function

Table 54: Multiplex Function

Pin name	Pin No.	Reset status	Mode 0 (default)	Mode 1	Mode 2	Mode 3
DISP_CLK	11	I/PU	GPIO	DISP_CLK	SPI_CLK	PCM_IN
DISP_DATA	12	I/PD	GPIO	DISP_DATA	SPI_MOSI	PCM_OUT
DISP_D/C	13	I/PD	GPIO	DISP_D/C	SPI_MISO	PCM_SYNC
DISP_CS	14	O/H	GPIO	DISP_CS	SPI_CS	PCM_CLK
PWM1	35	I/PD	PWM1	GPIO	EINT	-
PWM2	36	I/PD	PWM2	GPIO	-	-
SDA	37	I/PU	GPIO	SDA	-	
SCL	38	I/PU	GPIO	SCL	-	
KBR4	40	I/PD	GPIO	KBR4	-	
KBR3	41	I/PD	GPIO	KBR3	EINT	
KBR2	42	I/PD	GPIO	KBR2	-	
KBR1	43	I/PD	GPIO	KBR1	EINT	
KBR0	44	I/PD	GPIO	KBR0	-	
KBC4	47	I/PU	GPIO	KBC4	-	
KBC3	48	I/PU	GPIO	KBC3	EINT	
KBC2	49	I/PU	GPIO	KBC2	-	
KBC1	50	I/PU	GPIO	KBC1	-	
GPIO10	51	I/PD	GPIO	UART2_RXD	-	
GPIO11	67	O/L	GPIO	RF_SYNC	JD	
GPIO12	68	I/PD	GPIO	UART2_TXD		
NETLIGHT	52	I/PD	NETLIGHT	GPIO	-	
STATUS	66	I/PD	STATUS	GPIO	-	

III. Terms and Abbreviations

Table 55: Terms and Abbreviations

Abbreviation	Description
ADC	Analog-to-Digital Converter
AMR	Adaptive Multi-Rate
BT	Bluetooth
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear to Send
DTE	Data Terminal Equipment (typically computer, terminal, printer)
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
EGSM	Enhanced GSM
ESD	Electrostatic Discharge
ETS	European Telecommunication Standard
FR	Full Rate
GPRS	General Packet Radio Service
GSM	Global Standard for Mobile Communications
HR	Half Rate
IMEI	International Mobile Equipment Identity
Li-ion	Lithium-Ion
MO	Mobile Originated
MS	Mobile Station (GSM engine), also referred to as TE
MT	Mobile Terminated
PAP	Password Authentication Protocol
PBCCCH	Packet Broadcast Control Channel
PCB	Printed Circuit Board
PCL	Power Control Level
PCS	Personal Communication System, also referred to as GSM 1900
PDU	Protocol Data Unit
PPP	Point-to-point protocol
RF	Radio Frequency
RMS	Root Mean Square (value)
RTC	Real Time Clock
RX	Receive Direction
SIM	Subscriber Identification Module
SMS	Short Message Service
TDD	Time Division Distortion

TE	Terminal Equipment, also referred to as DTE
TX	Transmit Direction
UART	Universal Asynchronous Receiver & Transmitter
URC	Unsolicited Result Code
USSD	Unstructured Supplementary Service Data
VSWR	Voltage Standing Wave Ratio
Phonebook abbreviations	
FD	SIM fix dialing phonebook
LD	SIM last dialing phonebook (list of numbers most recently dialed)
MC	Mobile Equipment list of unanswered MT calls (missed calls)
ON	SIM (or ME) own numbers (MSISDNs) list
RC	Mobile Equipment list of received calls
SM	SIM phonebook
NC	Not connect

IV. Safety Caution

Table 56: Safety caution

Marks	Requirements
	When in a hospital or other health care facility, observe the restrictions about the use of mobiles. Switch the cellular terminal or mobile off, medical equipment may not operate normally because of RF energy interference.
	Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Forget to think much of these instructions may lead to flight safety or offend against local legal action, or both.
	Do not operate the cellular terminal or mobile in the presence of flammable gases or fumes. Switch off the cellular terminal when you are near petrol stations, fuel depots, chemical plants or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmospheres can constitute a safety hazard.
	Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. RF interference can occur if it is used close to TV sets, radios, computers or other electric equipment.
	Road safety comes first! Do not use a hand-held cellular terminal or mobile when driving a vehicle, unless it is securely mounted in a holder for hands free operation. Before making a call with a hand-held terminal or mobile, park the vehicle.
	GSM cellular terminals or mobiles operate over radio frequency signals and cellular networks and cannot be guaranteed to connect in all conditions, for example, no mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember using emergency calls. In order to make or receive calls, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength. Some networks do not allow emergency calls if certain network services or phone features are in use (e.g. lock functions, fixed dialing, etc.). You may have to deactivate those features before you can make an emergency call. Also, some networks require that a valid SIM card be properly inserted in the cellular terminal or mobile.

Contact us:**Shanghai SIMCom Wireless Solutions Ltd.**

Add: SIM Technology Building, No. 633, Jinzhong Road, Changning District, Shanghai P.R. China 200335

Tel: +86 21 3235 3300

Fax: +86 21 3235 3301

URL: www.sim.com/wm